TE 2-A18

Operating instructions	en
Mode d'emploi	fr
Manual de instrucciones	es
Manual de instruções	pt

1

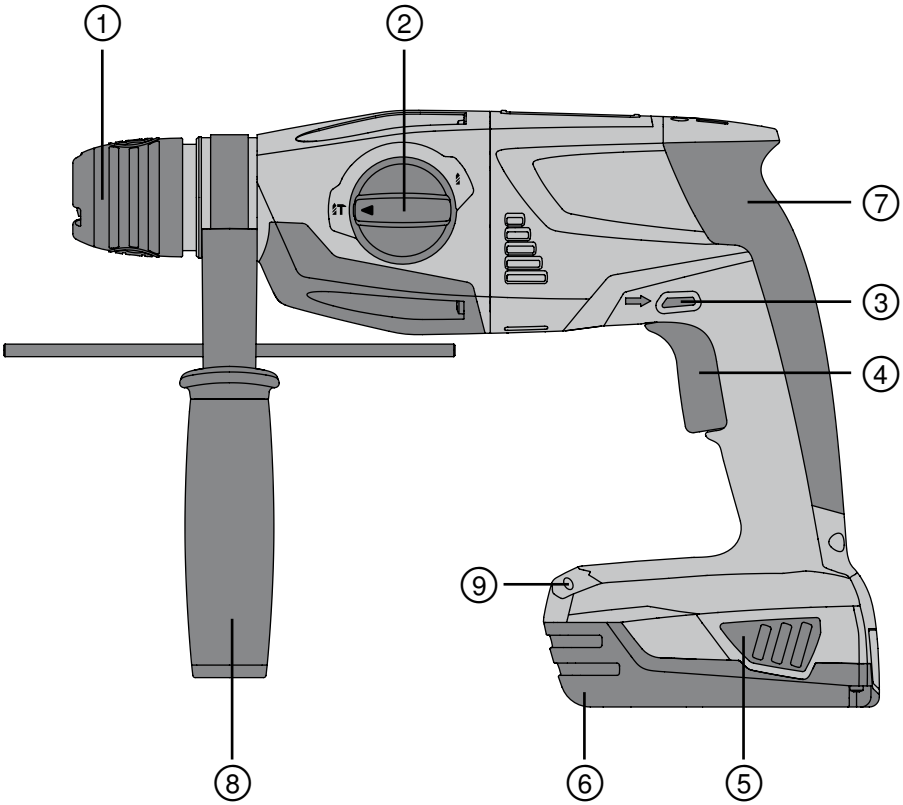

This Product is Certified
Ce produit est homologué
Producto homologado por
Este produto está registrado

c SP us

2

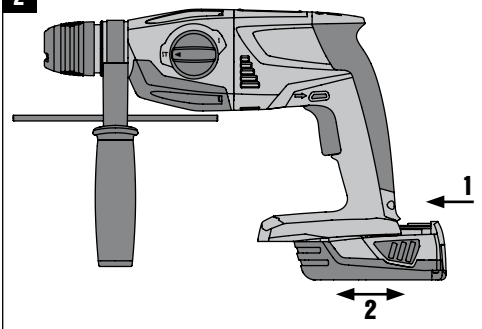

3

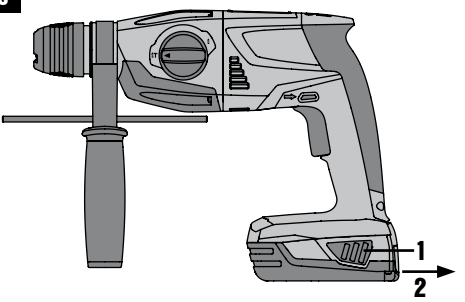

4

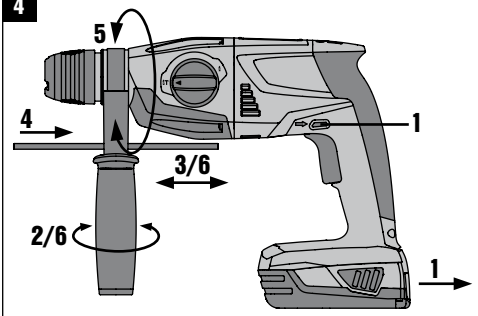

5

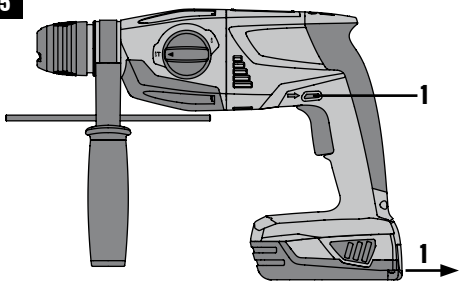

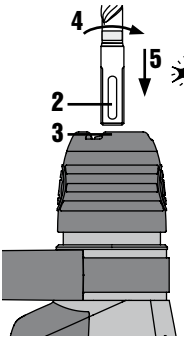

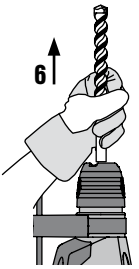

6

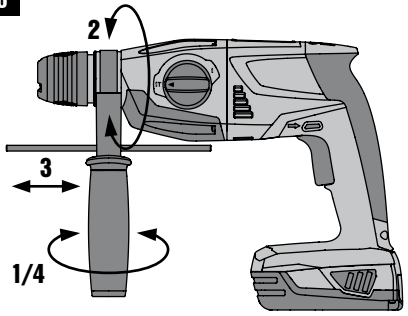

7

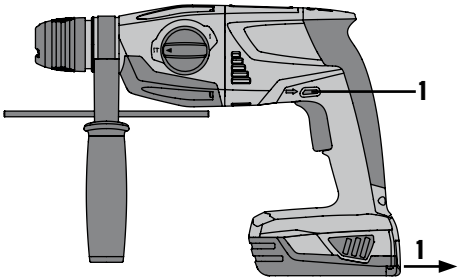

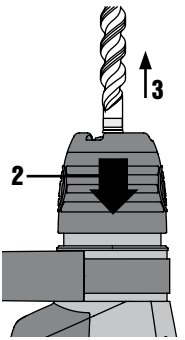

8

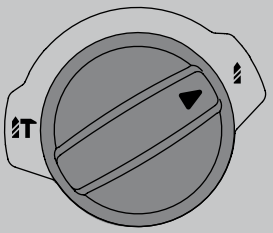

9

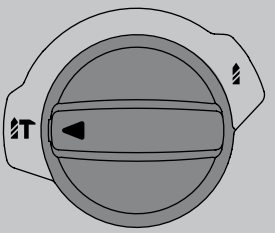

10

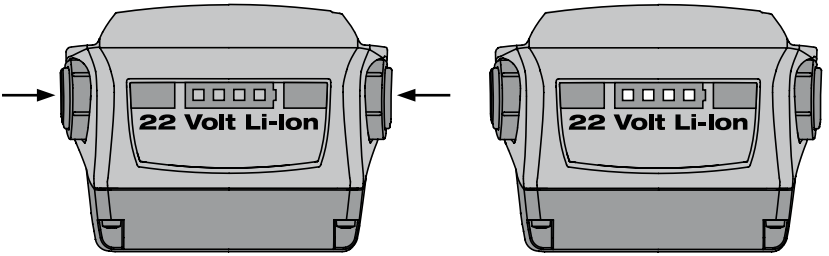

ORIGINAL OPERATING INSTRUCTIONS

TE 2-A18 cordless rotary hammer

en

It is essential that the operating instructions are read before the power tool is operated for the first time.

Always keep these operating instructions together with the power tool.

Ensure that the operating instructions are with the power tool when it is given to other persons.

Contents **Page**

1. General information	1
2. Description	2
3. Insert tools, accessories	4
4. Technical data	5
5. Safety instructions	5
6. Before use	8
7. Operation	10
8. Care and maintenance	12
9. Troubleshooting	13
10. Disposal	14
11. Manufacturer's warranty - tools	15

1 These numbers refer to the corresponding illustrations. The illustrations can be found on the fold-out cover pages. Keep these pages open while studying the operating instructions.
In these operating instructions, the designation "the power tool" always refers to the TE 2-A18 cordless rotary hammer.

Components, operating controls and indicators 1

① Chuck
② Function selector switch
③ Forward / reverse switch
④ Control switch
⑤ Battery release button (2 buttons)
⑥ Battery
⑦ Grip
⑧ Side handle with depth gauge
⑨ LED

1. General information

1.1 Safety notices and their meaning

DANGER
Draws attention to imminent danger that will lead to serious bodily injury or fatality.

WARNING
Draws attention to a potentially dangerous situation that could lead to serious personal injury or fatality.

CAUTION
Draws attention to a potentially dangerous situation that could lead to slight personal injury or damage to the equipment or other property.

NOTE
Draws attention to an instruction or other useful information.

1.2 Explanation of the pictograms and other information

Warning signs

General warning — Warning: electricity — Warning: caustic substances

en

Obligation signs

Wear eye protection

Wear a hard hat

Wear ear protection

Wear protective gloves

Wear breathing protection

Symbols

Read the operating instructions before use

Return waste material for recycling.

Drilling without hammering

Hammer drilling

V

Volts

Direct current

n_0

Rated speed under no load

/min

Revolutions per minute

RPM

Revolutions per minute

Ø

Diameter

Forward / reverse

Location of identification data on the power tool

The type designation and serial number can be found on the type identification plate on the machine or tool. Make a note of this data in your operating instructions and always refer to it when making an enquiry to your Hilti representative or service department.

Type:

Generation: 02

Serial no.:

2. Description

2.1 Use of the product as directed

The tool is a hand-held, battery-powered rotary hammer for hammer drilling in concrete and masonry, for drilling in steel, wood and masonry and for driving in and removing screws.
Use only the batteries and chargers recommended by Hilti.
The power tool may be used only in a dry environment.
Do not use the power tool where there is a risk of fire or explosion.
Working on materials hazardous to the health (e.g. asbestos) is not permissible.
The power tool is designed for professional use and may be operated, serviced and maintained only by trained, authorized personnel. This personnel must be informed of any special hazards that may be encountered. The power tool and its ancillary equipment may present hazards when used incorrectly by untrained personnel or when used not as directed.
The working environment may be as follows: construction site, workshop, renovation, conversion or new construction.

Modification of the power tool or tampering with its parts is not permissible.
Do not use the battery as a power source for other unspecified appliances.
To avoid the risk of injury, use only genuine Hilti accessories and insert tools.
Observe the information printed in the operating instructions concerning operation, care and maintenance.
Nationally applicable industrial safety regulations must be observed.

2.2 Chuck

TE-C CLICK chuck

2.3 Switches

Speed control switch for smooth starting
Function selector switch
Forward / reverse switch

2.4 Grips

Pivotable side handle with depth gauge
Grip

2.5 Protective features

Mechanical slip clutch

2.6 Additional electronic features of the power tool

The power tool is equipped with electronic overload protection. The power tool switches off automatically in the event of overloading. When the control switch is released and then pressed again, the power tool immediately regains full power.
In addition, the temperature of the power tool's electronics is monitored to ensure extra-long life. In the event of the electronics overheating, the drive spindle will not rotate even when the control switch is pressed fully. The power tool can be used again as soon as the temperature is within the permissible range.

2.7 Lubrication

Permanent lubrication (grease)

2.8 Items supplied as standard

1 Power tool
1 Side handle with depth gauge
1 Operating instructions
1 Hilti toolbox (optional)
1 Cleaning cloth (optional)
1 Grease (optional)

2.9 Additional items required for operating the tool

B 18/1.6 Li-ion, B 18/2.6 Li-ion or B 18/3.3 Li-ion battery. C 4/36-90, C 4/36-350, C 4/36-ACS, C 4/36-ACS TPS or C 4/36 battery charger.

2.10 Li-ion battery charge status

LEDs light constantly	LEDs blink	Charge status C
LED 1,2,3,4	-	C ≧ 75 %
LED 1,2,3	-	50 % ≦ C < 75 %
LED 1,2	-	25 % ≦ C < 50 %
LED 1	-	10 % ≦ C < 25 %
-	LED 1	C < 10 %

NOTE
Indication of the charge status is not possible while the power tool is in operation or immediately after operation. If the battery charge status LEDs flash, please refer to the information given in section 9.

3. Insert tools, accessories

Designation	Description
Hammer drill bits	Ø 4…16 mm (⅛" ... ⅝")
Anchor-setting tools	C-type connection end
Wood drill bits (auger bits)	Ø Max. 14 mm (½")
Metal drill bits	Ø Max. 10 mm (⅜")
Keyless chuck	13 mm (½"); with connection end
Key chuck	13 mm (½"), with connection end

Designation	Short designation
Side handle	
Depth gauge (5 x 180 mm (0.2" x 7")	
Dust removal system	TE DRS-S
Dust shield	
Charger for Li-ion batteries	C 4/36-90
Charger for Li-ion batteries	C 4/36-350
Charger for Li-ion batteries	C 4/36
Charger for Li-ion batteries	C 4/36-ACS
Charger for Li-ion batteries	C 4/36-ACS TPS
Battery	B 18/3.3 Li-ion
Battery	B 18/2.6 Li-ion
Battery	B 18/1.6 Li-ion

4. Technical data

Right of technical changes reserved.

Power tool	TE 2-A18
Rated voltage (DC voltage)	21.6 V
Weight	2.7 kg (5.95 lb)
Dimensions (L x W x H)	322 mm (12.68") x 94 mm (3.7") x 238 mm (9.37")
Hammer drilling speed	0…980/min
No-load speed in hammer drilling mode	0…1,090/min
Single impact energy	1.5 J

Other information about the power tool

Chuck	TE-C Click

Battery	B 18/1.6 Li-Ion	B 18/2.6 Li-Ion	B 18/3.3 Li-Ion
Nominal voltage	21.6 V	21.6 V	21.6 V
Capacity	1.6 Ah	2.6 Ah	3.3 Ah
Energy capacity	34.56 Wh	56.16 Wh	71.28 Wh
Weight	0.48 kg (1.06 lb)	0.78 kg (1.72 lb)	0.78 kg (1.72 lb)
Type of cell	Li-Ion	Li-Ion	Li-Ion
Temperature monitoring	NTC	NTC	NTC
Deep discharge prevention	Yes	Yes	Yes

5. Safety instructions

NOTE
The safety rules in section 5.1 contain all general safety rules for power tools which, in accordance with the applicable standards, must be listed in the operating instructions. Accordingly, some of the rules listed may not be relevant to this appliance.

5.1 General power tool safety warnings

a) ⚠ **WARNING**
Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. **Save all warnings and instructions for future reference.** The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

5.1.1 Work area safety

a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

5.1.2 Electrical safety

a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power**

tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.

c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.

d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.

e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.

f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

5.1.3 Personal safety

a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.

b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.

f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.

g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

5.1.4 Power tool use and care

a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.

b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.

e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.

f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

5.1.5 Battery tool use and care

a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
d) **Under abusive conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.

5.1.6 Service

a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

5.2 Hammer safety warnings

a) **Wear ear protectors.** Exposure to noise can cause hearing loss.
b) **Use auxiliary handles, if supplied with the tool.** Loss of control can cause personal injury.
c) **Hold power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring.** Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

5.3 Additional safety precautions

5.3.1 Personal safety

a) **Always hold the power tool securely with both hands on the grips provided. Keep the grips dry, clean and free from oil and grease.**
b) **Always wear protective gloves when starting and operating the power tool.**
c) **Breathing protection must be worn if the power tool is used without a dust removal system for work that creates dust.**
d) **Improve the blood circulation in your fingers by relaxing your hands and exercising your fingers during breaks between working.**
e) **Avoid touching rotating parts. Switch the power tool on only after bringing it into position at the workpiece.** Touching rotating parts, especially rotating insert tools, may lead to injury.
f) **Do not direct the lamp either at yourself or at anyone else. Do not, under any circumstances, look into the lamp. There is a risk of dazzling yourself and causing damage to the retina of the eye.**
g) **Activate the safety lock (forward / reverse selector switch in the middle position) or pull the battery out slightly until it engages in the first position before making adjustments to the tool or before fitting drill bits, the side handle or depth gauge and before storing or transporting the tool.**
h) **When restarting after the electronic overload protection system has switched the tool off, care must be taken to ensure that the power tool is held securely with both hands on the grips provided.**
i) **Children must be instructed not to play with the power tool.**
j) **The power tool is not intended for use by children, by debilitated persons or those who have received no instruction or training.**
k) **Whenever the power tool is knocked or dropped, check its operation and, if necessary, do not continue to use it.**
l) **WARNING: Some dust created by grinding, sanding, cutting and drilling contains chemicals known to cause cancer, birth defects, infertility or other reproductive harm; or serious and permanent respiratory or other injury.** Some examples of these chemicals are: lead from lead-based paints, crystalline silica from bricks, concrete and other masonry products and natural stone, arsenic and chromium from chemically-treated lumber. Your risk from these exposures varies, depending on how often you do this type of work. **To reduce exposure to these chemicals, the operator and bystanders should work in a well-ventilated area, work with approved safety equipment, such as respiratory protection appropriate for the type of dust generated, and designed to filter out microscopic particles and direct dust away from the face and body. Avoid prolonged contact with dust. Wear protective clothing and wash exposed areas with soap and water.** Allowing dust to get into your mouth, eyes, or to remain on your skin may promote absorption of harmful chemicals.

5.3.2 Electric tool use and care

a) **Secure the workpiece. Use clamps or a vice to secure the workpiece.** The workpiece is thus held more securely than by hand and both hands remain free to operate the power tool.

b) **Check that the insert tools used are compatible with the chuck system and that they are secured in the chuck correctly.**

5.3.3 Battery tool use and care

a) **Ensure the switch is in the off position before inserting battery pack.** Inserting the battery pack into power tools that have the switch on invites accidents.

b) **Observe the special instructions applicable to the transport, storage and use of Li-ion batteries.**

c) **Do not expose batteries to high temperatures or fire.** This presents a risk of explosion.

d) **Do not disassemble, squash or incinerate batteries and do not subject them to temperatures over 80°C (176°F).** A risk of fire, explosion or injury through contact with caustic substances may otherwise result.

e) **Do not use batteries other than those approved for use with the applicable power tool or appliance.** Use of other batteries or use of the battery for purposes for which it is not intended presents a risk of fire and explosion.

f) **Do not use excessive force when fitting or removing the battery.**

g) **Do not charge or continue to use damaged batteries (e.g. batteries with cracks, broken parts, bent or pushed-in and/or pulled-out contacts).**

h) **Avoid short-circuiting the battery. Check that the terminals on the battery and in the power tool are free from foreign objects before inserting the battery in the power tool.** Short circuiting the battery terminals presents a risk of fire, explosion and chemical burns.

i) **Avoid ingress of dampness.**Dampness may cause a short circuit resulting in a risk of burning injury or fire.

5.3.4 Electrical safety

Before beginning work, check the working area (e.g. using a metal detector) to ensure that no concealed electric cables or gas and water pipes are present. External metal parts of the power tool may become live, for example, when an electric cable is damaged accidentally. This presents a serious risk of electric shock.

5.3.5 Work area safety

a) **Ensure that the workplace is well lit.**

b) **Ensure that the workplace is well ventilated.** Exposure to dust at a poorly ventilated workplace may result in damage to the health.

c) **If the work involves breaking right through, take the appropriate safety measures at the opposite side**. Parts breaking away could fall out and / or fall down and injure other persons.

5.3.6 Personal protective equipment

The user and any other persons in the vicinity must wear ANSI Z87.1-approved eye protection, a hard hat, ear protection, protective gloves and breathing protection while the machine is in use.

6. Before use

CAUTION
Wear protective gloves when handling the battery back.

6.1 Battery use and care

NOTE
Battery performance drops at low temperatures. Never use the battery until the cells become fully discharged. Change to the second battery as soon

as a drop in performance is noticed. Recharge the battery immediately so that it is ready for reuse.

Store the battery in a cool, dry place. Never store the battery where it is exposed to direct sunlight or sources of heat, e.g. on heaters / radiators or behind a motor vehicle windscreen. Batteries that have reached the end of their life must be disposed of safely and correctly to avoid environmental pollution.

6.2 Charging the battery

DANGER
Use only the Hilti batteries and Hilti chargers listed under "Accessories".

6.2.1 Charging a new battery for the first time

Charge the battery fully before using it for the first time.

6.2.2 Charging a previously used battery

Ensure that the outer surfaces of the battery are clean and dry before inserting it in the corresponding charger.
For information about the charging process, read the operating instructions for the charger and section 2.10 Charge status of the Li-ion battery in these operating instructions.
Li-ion batteries are ready for use at any time, even when only partly charged. Charging progress is indicated by the LED display (see charger operating instructions).

6.3 Fitting the battery 2

CAUTION
Before fitting the battery, check that the power tool is switched off and that the safety lock is engaged (forward/reverse switch in the middle position). Use only the Hilti batteries approved for use with this power tool.

1. Push the battery into the power tool from the rear until it is heard to engage with a double click.
2. **CAUTION A falling battery may present a risk of injury to yourself or others.**
   Check that the battery is seated securely in the power tool.

6.4 Removing the battery 3

CAUTION
Do not damage the battery pack when removing it. After removal, check the battery pack and the power tool.

1. Press both battery release buttons.
2. Pull the battery out of the power tool toward the rear.

6.5 Transport and storage of battery packs

Pull the battery pack out of the locked position (working position) and move it into the first click-stop position (transport position).
If you disconnect a battery pack from the power tool for transport or storage, make sure that the contacts of the battery pack are not short-circuited. Remove loose metal parts such as screws, nails, clamps, loose screw bits, wires or metal swarf from the case, toolbox or transport container, or prevent these parts from coming into contact with the battery packs.
Observe national and international transport regulations when shipping battery packs (transportation by road, rail, sea or air).

6.6 Fitting the side grip 4

CAUTION
Wear protective gloves when fitting the side handle and the TE DRS-S dust removal system.

1. Set the forward / reverse switch to the middle position or remove the battery from the power tool.
2. Release the side grip clamping band by turning the grip counterclockwise.
3. Remove the depth gauge from the side grip in order to avoid injury.
4. Slide the side grip clamping band over the chuck and onto the shaft.
5. Pivot the side grip into the desired position.
6. Fit the depth gauge and secure the side grip in the desired position by turning the grip firmly until tight.

6.7 Dust removal (TE DRS-S)

A DRS dust removal head can be fitted to the depth gauge of the side handle. Drilling dust and fragments can then be removed by a vacuum cleaner. For further information on operation and use of the

dust removal system, please refer to the separate operating instructions for the TE DRS-S.

7. Operation

CAUTION
In the event of the drill bit sticking, the power tool will pivot about its own axis. Always use the power tool with the side handle fitted and hold it securely with both hands so that the resulting opposing force causes the slip clutch to release in the event of the drill bit sticking. Use clamps or a vice to hold the workpiece securely.

CAUTION
During operation, wear protective gloves, especially when inserting, adjusting and removing the insert tool, because the insert tool can become hot during use.

7.1 Preparing for use

7.1.1 Fitting the insert tool 5

CAUTION
Do not use drill bits with a C-type connection end in a drill adapter. After inserting drill bits in the adapter, check for firm seating and concentricity.

1. Set the forward / reverse switch to the middle position or remove the battery from the power tool.
2. Check that the connection end of the insert tool is clean and lightly greased. Clean it and grease it if necessary.
   NOTE Make sure that not too much grease is applied.
3. Check that the sealing lip of the dust shield is clean and in good condition. Clean the dust shield if necessary or replace it if the sealing lip is found to be damaged (please refer to the "Care and maintenance" section).
4. Push the insert tool into the chuck and rotate it while applying slight pressure until it engages in the guide grooves.
5. Push the insert tool into the chuck until it is heard to engage.
6. After insertion, check that the drill bit is held securely in the chuck and turns concentrically.

7.1.2 Adjusting the depth gauge / side grip 6

CAUTION
Use only depth gauges not exceeding 180 mm (7") in length.

DANGER
Check that the side handle is correctly secured in place. An insufficiently secured side handle may cause personal injury.

1. Release the side grip clamping band by turning the grip counterclockwise.
2. Pivot the side grip into the desired position.
3. Adjust the depth gauge to the desired drilling depth.
4. Tighten the side grip securely by turning the grip section. This also clamps the depth gauge in position.

7.1.3 Removing the tool 7

1. Set the forward / reverse switch to the middle position or remove the battery from the power tool.
2. Open the chuck by pulling back the chuck release sleeve.
3. Pull the insert tool out of the chuck.

7.2 Operation

CAUTION
Working on the material may cause it to splinter. **Wear eye protection and protective gloves. Wear breathing protection if no dust removal system is used.** Splintering material presents a risk of injury to the eyes and body.

CAUTION
The work generates noise. **Wear ear protectors.** Exposure to noise can cause hearing loss.

7.2.1 Working at low temperatures

NOTE
The hammering mechanism works only when the power tool has reached a minimum operating temperature.

Bring the drill bit briefly into contact with the base material while allowing the power tool to run under no load until the minimum operating temperature is reached. If necessary, repeat this procedure until the hammering mechanism begins to operate.

7.2.2 Forward / reverse

NOTE
The forward / reverse switch is used to select the direction of rotation of the drive spindle. An interlock prevents switching while the motor is running. The control switch is locked when the forward / reverse switch is in the middle position.

For forward rotation, push the forward / reverse switch on the side of the power tool toward the chuck in the direction of the arrow.
For reverse rotation, push the forward / reverse switch on the side of the power tool toward the grip in the direction of the arrow.
Bring the forward / reverse switch into the desired position.

7.2.3 Drilling without hammering 8

CAUTION
Do not use drill bits with a C-type connection end in a drill adapter. After inserting drill bits in the adapter, check for firm seating and concentricity.

1. Set the forward / reverse switch to the “forward” position before beginning drilling.
2. Turn the function selector switch until it engages in the “Drilling without hammering” position. Do not operate the function selector switch while the motor is running.
3. Bring the side grip into the desired position and check that it is fitted correctly and secured.
4. Insert the battery.
5. Position the power tool and drill bit at the point where the hole is to be drilled.
6. Press the control switch slowly (drill at a low speed until the drill bit centers itself in the hole).
7. Press the control switch fully to continue drilling with full power.
8. Adjust the pressure applied to the power tool according to the material you are working on. This will ensure the optimum rate of drilling progress.

7.2.4 Hammer drilling 9

NOTE
Only use hammer drill bits with a C-type connection end.

1. Set the forward / reverse switch to the “forward” position before beginning drilling.
2. Turn the function selector switch until it engages in the “Hammer drilling” position. Do not operate the function selector switch while the motor is running.
3. Bring the side grip into the desired position and check that it is fitted correctly and secured.
4. Insert the battery.
5. Position the power tool and drill bit at the point where the hole is to be drilled.
6. Press the control switch slowly (drill at a low speed until the drill bit centers itself in the hole).
7. Press the control switch fully to continue drilling with full power.
8. Adjust the pressure applied to the power tool according to the material you are working on. This will ensure the optimum rate of drilling progress.
9. Reduce drilling speed shortly before breaking through in order to avoid spalling.

7.2.5 Reading the charge status LED display on Li-ion batteries 10

NOTE
The charge status cannot be indicated while the power tool is in operation. If LED 1 blinks this indicates that the battery is either fully discharged or is too hot (temperature above 80°C (176°F)). The battery must then be inserted in the charger. If all 4 LEDs flash, this indicates that the power tool has been overloaded or has overheated.

The Li-ion battery features a charge status LED display. The charge status is indicated by the LEDs on the battery during charging (please refer to the operating

instructions for the charger). When the battery is not in use, pressing one of the battery release buttons or inserting the battery into the power tool causes the battery charge status to be displayed by the four LEDs for three seconds.
See section: 2.10 Li-ion battery charge status

7.2.6 Illumination of the drilling area by integrated LED

NOTE
Keep the LED clean so that it always provides sufficient illuminating power.

For working in very dark areas, the led illuminates the drilling area.
The LED is activated automatically when the control switch is pressed and lights up.
The LED goes out slowly after the control switch is released.

8. Care and maintenance

CAUTION
Before beginning cleaning, remove the battery from the power tool in order to prevent unintentional starting.

8.1 Care of insert tools

Clean off dirt and dust deposits adhering to the insert tools and protect them from corrosion by wiping the insert tools from time to time with an oil-soaked rag. Check that the connection end of the insert tool is clean and lightly greased. Clean it and grease it if necessary.

8.2 Care of the power tool

CAUTION
Keep the power tool, especially its grip surfaces, clean and free from oil and grease. Do not use cleaning agents which contain silicone.

The outer casing of the power tool is made from impact-resistant plastic. Sections of the grip are made from a synthetic rubber material.
Never operate the power tool when the ventilation slots are blocked. Clean the ventilation slots carefully using a dry brush. Do not permit foreign objects to enter the interior of the power tool. Clean the outside of the power tool at regular intervals with a slightly damp cloth. Do not use a spray, steam pressure cleaning equipment or running water for cleaning. This may negatively affect the electrical safety of the power tool.

8.3 Cleaning or replacing the dust shield

Clean the dust shield on the chuck with a dry, clean cloth at regular intervals. Clean the sealing lip by wiping it carefully and then grease it again lightly with Hilti grease. It is essential that the dust shield is replaced if the sealing lip is found to be damaged. Push the tip of a screwdriver under the edge of the dust shield and prise it out toward the front. Clean the area of the chuck in contact with dust shield and then fit a new dust shield. Press it in firmly until it engages.

8.4 Care of the Li-ion battery

Avoid entrance of moisture.
Charge the battery fully before using it for the first time.
In order to achieve maximum battery life, stop discharging the battery as soon as a significant drop in performance is noticed.
NOTE
If use of the power tool continues, further battery discharge will be stopped automatically before the battery cells suffer damage.

Charge the battery with the Hilti charger approved for use with Li-ion batteries.
NOTE
- A conditioning charge (as is required with NiCd or NiMH batteries) is not necessary.
- Interruption of the charging procedure has no negative effect on battery life.
- Charging can be started at any time with no negative effect on battery life. There is no memory effect (as with NiCd or NiMH batteries).
- For best results, batteries should be stored fully charged in a cool dry place. Avoid charging the battery in places subject to high ambient temperatures (e.g.

at a window) as this has an adverse effect on battery life and increases the rate of self-discharge.
- If the battery no longer reaches full charge, it may have lost capacity due to aging or overstressing. It is possible to continue working with a battery in this condition but it should be replaced in good time.

8.5 Maintenance

WARNING
Repairs to the electrical section of the power tool may be carried out only by trained electrical specialists.

Check all external parts of the power tool for damage at regular intervals and check that all controls operate faultlessly. Do not operate the power tool if parts are damaged or when the controls do not function faultlessly. If necessary, the power tool should be repaired by Hilti Service.

8.6 Checking the power tool after care and maintenance

After carrying out care and maintenance work on the power tool, check that all protective and safety devices are fitted and that they function faultlessly.

9. Troubleshooting

Fault	Possible cause	Remedy
The power tool doesn't run.	The battery is discharged or fitted incorrectly.	The battery must be heard to engage with a double click or, respectively, needs to be charged.
	Electrical fault.	Remove the battery from the power tool and contact Hilti Service.
	The battery is too hot or too cold.	Bring the battery to the recommended working temperature.
The power tool doesn't work and 1 LED blinks.	The battery is discharged.	Change the battery and recharge the discharged battery.
	The battery is too hot or too cold.	Bring the battery to the recommended working temperature.
The power tool doesn't work and all 4 LEDs blink.	The power tool has been overloaded.	Release the control switch and press it again.
	The overheating prevention cut-out has been activated.	Allow the power tool to cool down. Clean the ventilation slots.
No hammering action.	The power tool is too cold.	Allow the power tool to warm up to the minimum operating temperature. See section: 7.2.1 Working at low temperatures
	The function selector switch is set to "Drilling without hammering".	Set the function selector switch to "Hammer drilling".
The control switch can't be pressed, i.e. the switch is locked.	The forward / reverse switch is in the middle position (transport lock engaged).	Push the forward / reverse switch to the left or right.
The drive spindle doesn't rotate.	The permissible operating temperature of the power tool's electronics has been exceeded.	Allow the power tool to cool down.
	The permissible battery operating temperature has been exceeded.	Bring the battery to the recommended working temperature.

Fault	Possible cause	Remedy
The drive spindle doesn't rotate.	The battery is discharged.	Change the battery and recharge the discharged battery.
The power tool switches itself off automatically.	The overload cut-out has been activated.	Release the control switch, reduce the load on the power tool and then press the switch again.
The battery runs down more quickly than usual.	Battery condition is not optimal.	Have battery condition diagnosed by Hilti Service or replace with a new battery.
The battery doesn't engage with an audible double click.	The retaining lugs on the battery are dirty.	Clean the retaining lugs and check that the battery engages securely. Contact Hilti Service if the problem persists.
The power tool or the battery gets very warm.	Electrical fault.	Switch the power tool off immediately, remove the battery and contact Hilti Service.
	The power tool has been overloaded (application limits exceeded).	Use the right power tool for the job (don't use a low-powered tool for heavy work).
The insert tool can't be released.	The chuck is not pulled back fully.	Pull the chuck back as far as it will go and remove the cutting tool.
The tool makes no progress.	The forward/reverse switch is set to reverse rotation.	Set the forward/reverse switch to forward rotation.
The power tool doesn't start.	Power tool overloaded.	Switch off the power tool. Remove the battery pack. Do not continue to use the power tool.

10. Disposal

CAUTION
Improper disposal of the equipment may have serious consequences: the burning of plastic components generates toxic fumes which may present a health hazard. Batteries may explode if damaged or exposed to very high temperatures, causing poisoning, burns, acid burns or environmental pollution. Careless disposal may permit unauthorized and improper use of the equipment. This may result in serious personal injury, injury to third parties and pollution of the environment.

CAUTION
Dispose of defective batteries without delay. Keep them out of reach of children. Do not attempt to open or dismantle batteries and do not dispose of them by incineration.

CAUTION
Dispose of the batteries in accordance with national regulations or return them to Hilti.

Most of the materials from which Hilti power tools or appliances are manufactured can be recycled. The materials must be correctly separated before they can be recycled. In many countries, Hilti has already made arrangements for taking back your old power tools or appliances for recycling. Please ask your Hilti customer service department or Hilti representative for further information.

11. Manufacturer's warranty - tools

Hilti warrants that the tool supplied is free of defects in material and workmanship. This warranty is valid so long as the tool is operated and handled correctly, cleaned and serviced properly and in accordance with the Hilti Operating Instructions, and the technical system is maintained. This means that only original Hilti consumables, components and spare parts may be used in the tool.

This warranty provides the free-of-charge repair or replacement of defective parts only over the entire lifespan of the tool. Parts requiring repair or replacement as a result of normal wear and tear are not covered by this warranty.

Additional claims are excluded, unless stringent national rules prohibit such exclusion. In particular, Hilti is not obligated for direct, indirect, incidental or consequential damages, losses or expenses in connection with, or by reason of, the use of, or inability to use the tool for any purpose. Implied warranties of merchantability or fitness for a particular purpose are specifically excluded.

For repair or replacement, send the tool or related parts immediately upon discovery of the defect to the address of the local Hilti marketing organization provided.

This constitutes Hilti's entire obligation with regard to warranty and supersedes all prior or contemporaneous comments and oral or written agreements concerning warranties.

Hilti Corporation
LI-9494 Schaan
Tel.: +423 / 234 21 11
Fax: +423 / 234 29 65
www.hilti.com

Hilti = registered trademark of Hilti Corp., Schaan
W 4118 | 0112 | 00-Pos. 3 | 1
Printed in China © 2012
Right of technical and programme changes reserved S. E. & O.

2023935 / C

2023935

HILTI

SID/SIW 14-A/18-A

Operating instructions
Mode d’emploi
Manual de instrucciones

en
fr
es

1

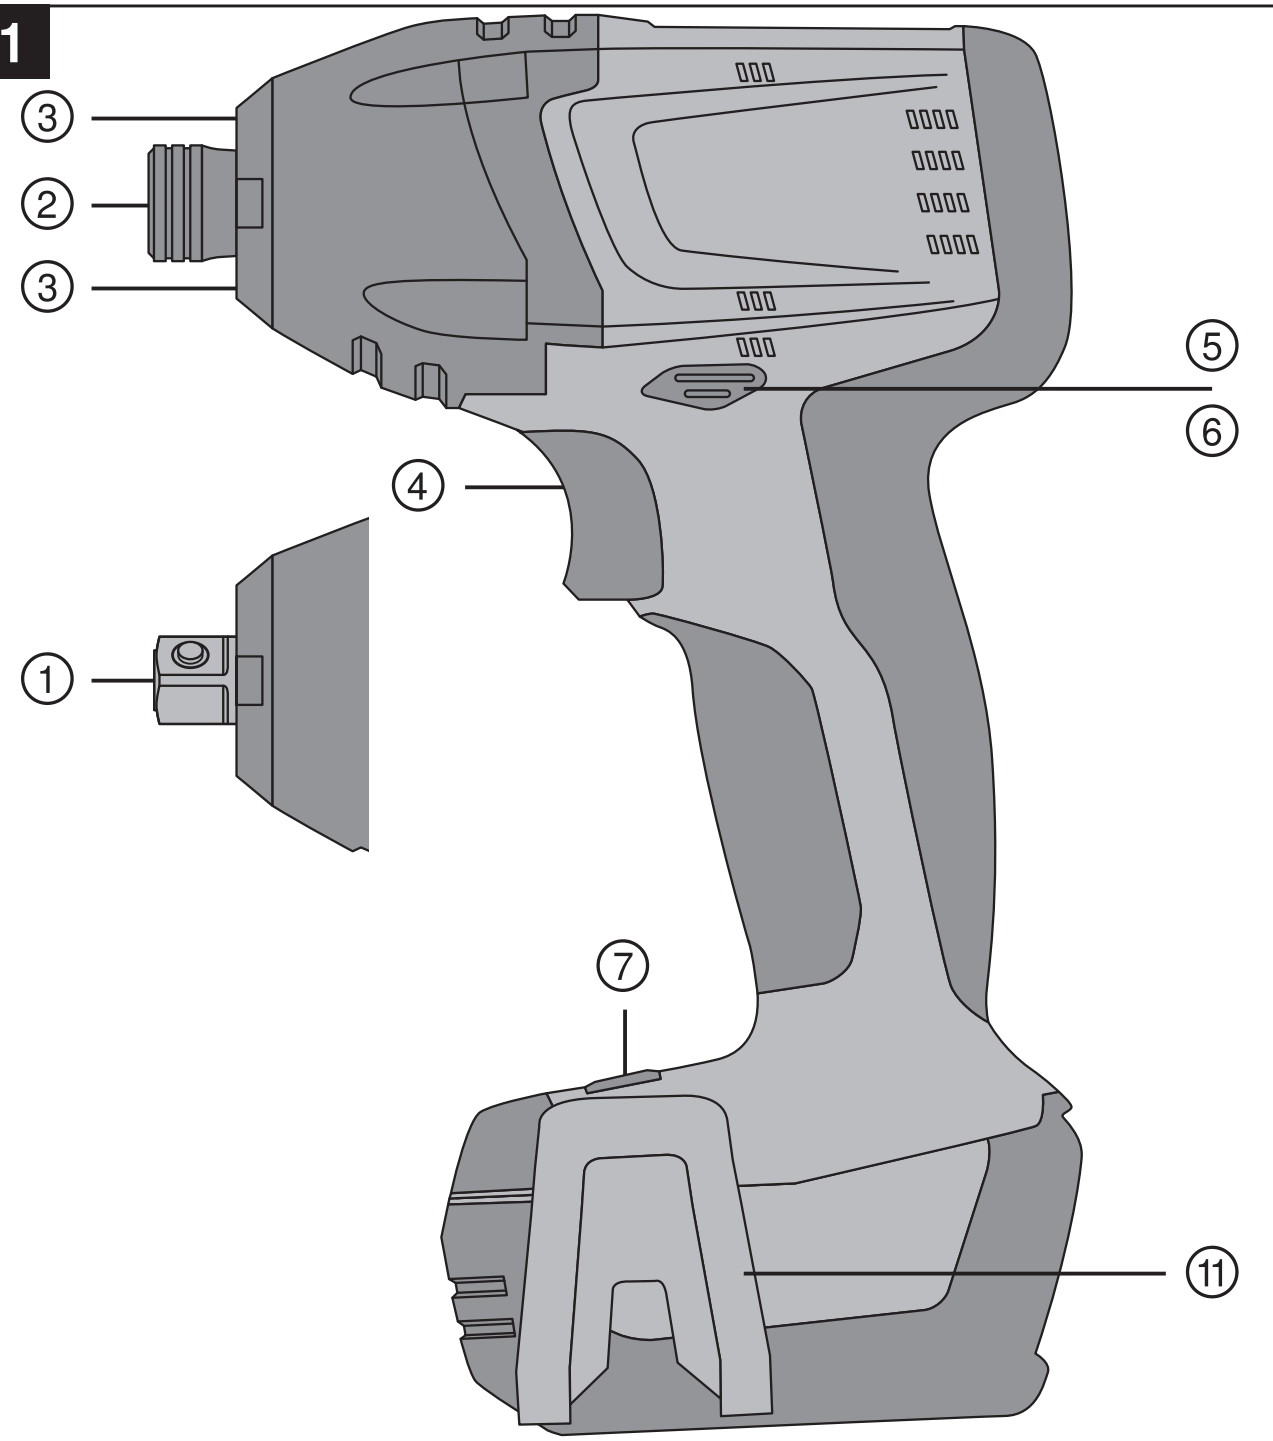

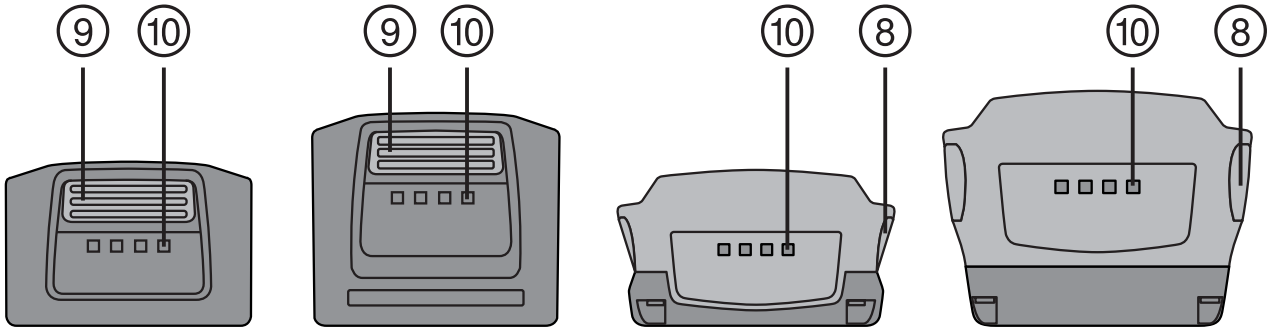

B14 1.6Ah

B14 3.3Ah

B18 1.6Ah

B18 2.6Ah
B18 3.3Ah

ETL listed to US and Canadian safety standards
Homologué ETL (conforme aux normes de sécurité américaines et canadiennes)
Producto homologado según normas de seguridad americanas y canadienses
Produto homologado de accordo com as normas de segurança americanas e canadianas

2

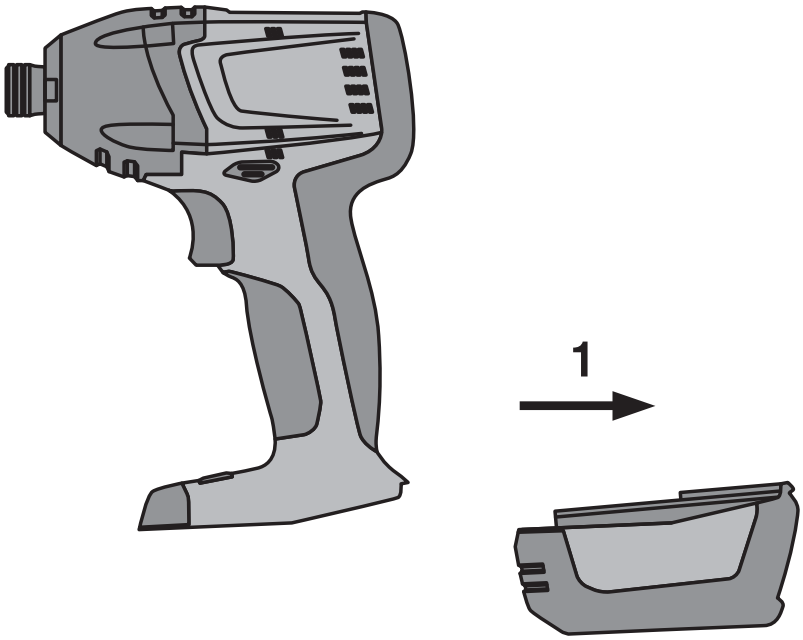

3

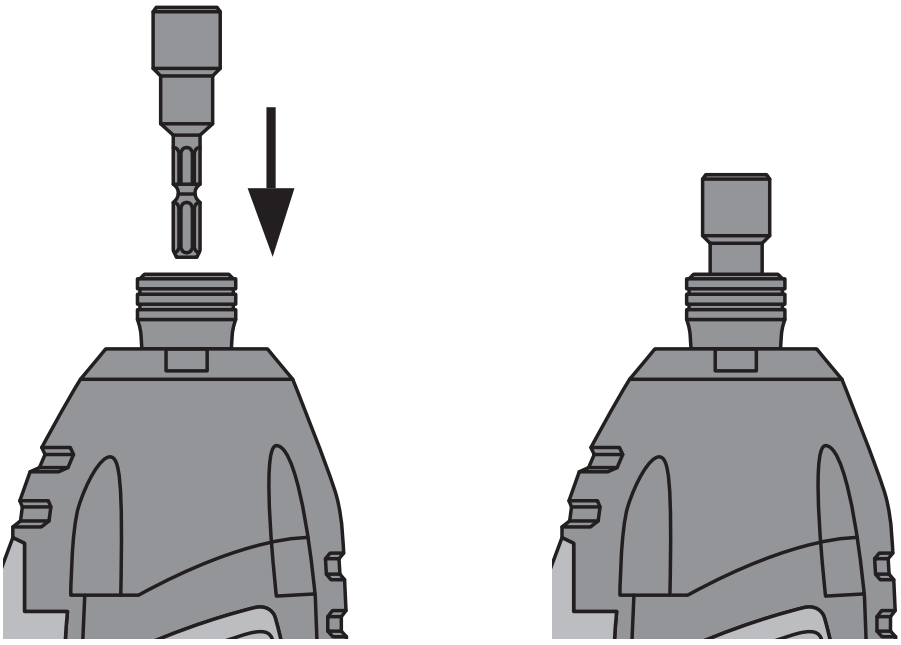

4

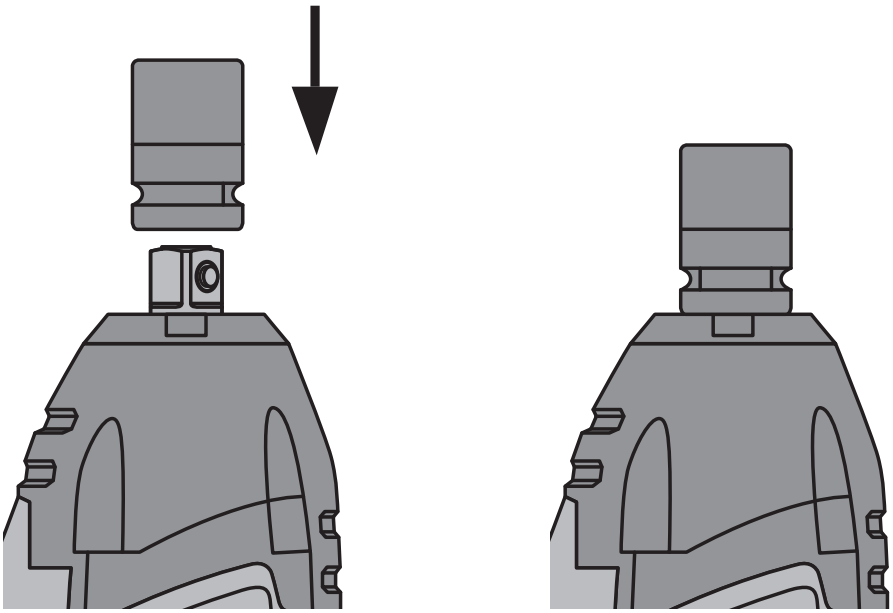

5

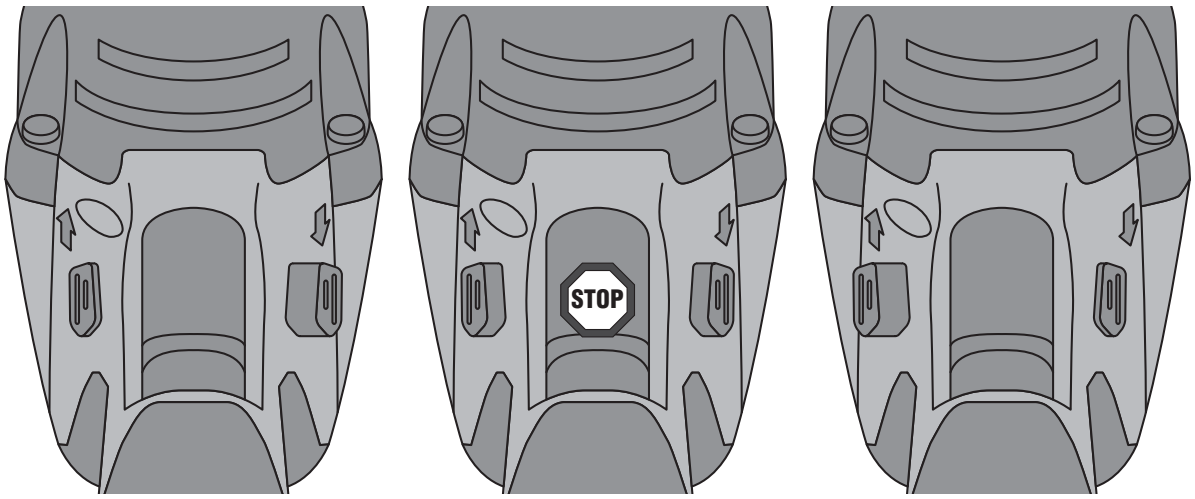

6

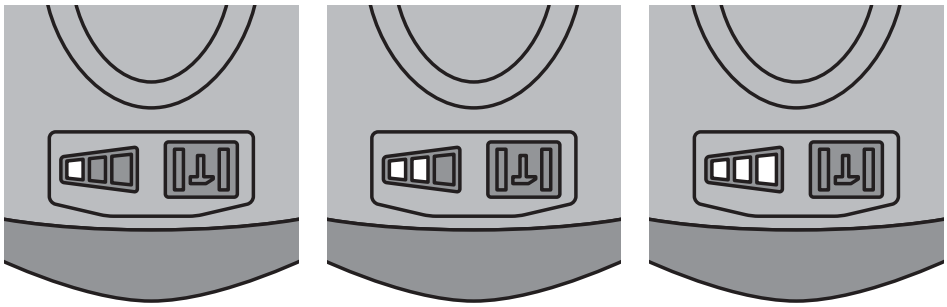

7

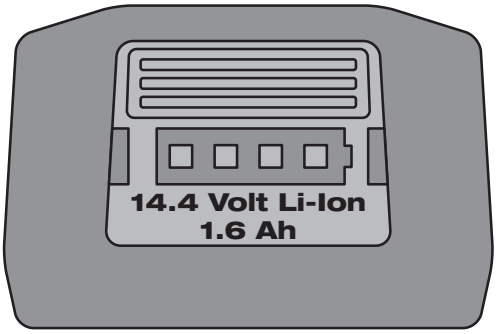

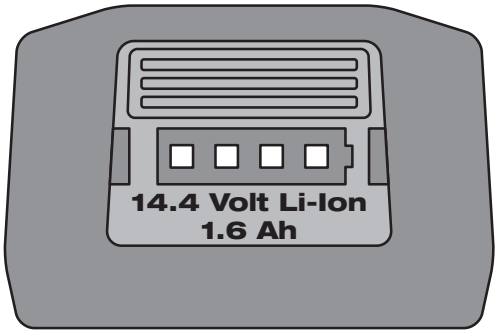

8

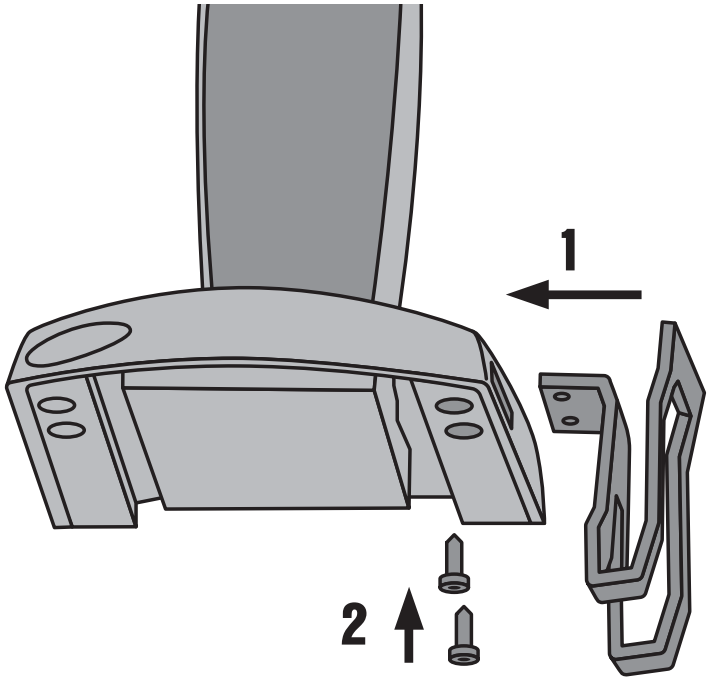

ORIGINAL OPERATING INSTRUCTIONS

SID 14-A / SID 18-A / SIW 14-A / SIW 18-A cordless impact driver/wrench

en

It is essential that the operating instructions are read before the power tool is operated for the first time.

Always keep these operating instructions together with the power tool.

Ensure that the operating instructions are with the power tool when it is given to other persons.

Contents	Page
1. General information	1
2. Description	2
3. Insert tools, accessories	3
4. Technical data	4
5. Safety instructions	5
6. Before use	8
7. Operation	9
8. Care and maintenance	11
9. Troubleshooting	12
10. Disposal	12
11. Manufacturer's warranty - tools	13

1 These numbers refer to the corresponding illustrations. The illustrations can be found on the fold-out cover pages. Keep these pages open while studying the operating instructions.
In these operating instructions, the designation "the power tool" always refers to the SIW 14-A, SIW 18-A, SID 14-A or SID 18-A cordless impact wrench / screwdriver with battery fitted.

Operating controls and parts 1

① SIW square drive
② SID hex. socket drive
③ Light
④ Control switch (with electronic speed control)
⑤ Forward / reverse switch
⑥ Motor brake
⑦ Torque selector switch
⑧ SID/W 18-A battery release buttons
⑨ SID/W 14-A battery release button
⑩ Charge status and fault display (Li-ion battery)
⑪ Belt hook (optional)

1. General information

1.1 Safety notices and their meaning

DANGER
Draws attention to imminent danger that will lead to serious bodily injury or fatality.

WARNING
Draws attention to a potentially dangerous situation that could lead to serious personal injury or fatality.

CAUTION
Draws attention to a potentially dangerous situation that could lead to slight personal injury or damage to the equipment or other property.

NOTE
Draws attention to an instruction or other useful information.

1.2 Explanation of the pictograms and other information

Warning signs

General warning

Warning: electricity

Warning: caustic substances

en

Obligation signs

Wear eye protection

Wear a hard hat

Wear ear protection

Wear protective gloves

Wear breathing protection

Symbols

Read the operating instructions before use

Return waste material for recycling.

Volts

Direct current

Rated speed under no load

Revolutions per minute

Revolutions per minute

Location of identification data on the power tool

The type designation can be found on the type identification plate and the serial number on the side of the motor housing. Make a note of this data in your operating instructions and always refer to it when making an enquiry to your Hilti representative or service department.

Type:

Generation: 01

Serial no.:

2. Description

2.1 Use of the product as directed

The SID 14-A, SIW 14-A, SID 18-A and SIW 18-A are hand-held cordless impact screwdrivers/wrenches. They are designed for driving and removing screws in wood, metal, masonry and concrete and for tightening and releasing nuts and bolts.

Working on materials hazardous to the health (e.g. asbestos) is not permissible.

Do not use the battery as a power source for other unspecified appliances.

Modification of the power tool or tampering with its parts is not permissible.

To avoid the risk of injury, use only genuine Hilti accessories and insert tools.

The power tool should not be used for applications that require a precise torque. For applications that require a precise torque or where only a special limited torque is permitted, there is a risk of over-tightening and damage to the screw or workpiece. For these types of application, use a tool with a predefined torque setting to prevent over-tightening.

Observe the information printed in the operating instructions concerning operation, care and maintenance.

The power tool is designed for professional use and may be operated, serviced and maintained only by trained, authorized personnel. This personnel must be informed of any special hazards that may be encountered. The power tool and its ancillary equipment may present hazards when used incorrectly by untrained personnel or when used not as directed.

The working environment may be as follows: construction site, workshop, renovation, conversion or new construction.

Nationally applicable industrial safety regulations must be observed.

2.2 The items supplied include (toolbox versions):

1 Power tool
1 Operating instructions
1 Hilti toolbox

2.3 The items supplied include (cardboard box versions):

1 Power tool
1 Operating instructions

2.4 Additional items required for operating the tool

B 18/1.6 Li-ion, B 18/2.6 Li-ion, B 18/3.3 Li-ion, B 14/1.6 Li-ion or B 14/3.3 Li-ion battery with C 4/36, C 4/36-ACS or C 4/36-ACS TPS charger.

2.5 Li-ion battery charge status

LEDs light constantly	LEDs blink	Charge status C
LED 1,2,3,4	-	C ≧ 75 %
LED 1,2,3	-	50 % ≦ C < 75 %
LED 1,2	-	25 % ≦ C < 50 %
LED 1	-	10 % ≦ C < 25 %
-	LED 1	C < 10 %

3. Insert tools, accessories

Designation	Short designation	Description
Bit holder		S-BH 50
Charger for Li-ion batteries	C 4/36-ACS	
Charger for Li-ion batteries	C 4/36	
Battery	B 14/3.3, B 14/1.6 Li-Ion	
Battery	B 18/1.6 Li-ion	
Battery	B 18/2.6 Li-ion	
Battery	B 18/3.3 Li-ion	

Designation	Description
Bits	Hex. bit, bit adapter, drill bits with hex. shank
Sockets	Impact wrench sockets

4. Technical data

Right of technical changes reserved.

en

Power tool	SID 14-A	SIW 14-A	SID 18-A	SIW 18-A
Rated voltage	14.4 V	14.4 V	21.6 V	21.6 V
Weight (including battery and chuck)	1.3 kg (2.87 lb)	1.3 kg (2.87 lb)	1.5 kg (3.31 lb)	1.5 kg (3.31 lb)
Dimensions (L x W x H)	151 mm (5.94") x 81 mm (3.19") x 228 mm (8.98")	154 mm (6.06") x 81 mm (3.19") x 228 mm (8.98")	151 mm (5.94") x 94 mm (3.7") x 228 mm (8.98")	154 mm (6.06") x 94 mm (3.7") x 228 mm (8.98")
Rated no-load running speed, pos. I	0…1,000/min	0…1,000/min	0…1,000/min	0…1,000/min
Rated no-load running speed, pos. II	0…1,500/min	0…1,500/min	0…1,500/min	0…1,500/min
Rated no-load running speed, pos. III	0…2,500/min	0…2,300/min	0…2,500/min	0…2,300/min
Impact speed	Max. 3,100/min	Max. 3,400/min	Max. 3,450/min	Max. 3,500/min
Speed adjustment	Three settings	Three settings	Three settings	Three settings
Standard screws	M8 - M16	M8 - M16	M8 - M16	M8 - M16
High-strength screws	M6 - M12	M6 - M12	M6 - M12	M6 - M12
Chuck	¼" hex. socket with locking sleeve	½" square drive with ball-notch retention and ⅜" with locking ring	¼" hex. socket with locking sleeve	½" square drive with ball-notch retention and ⅜" with locking ring
Speed control	Electronic, by way of the control switch	Electronic, by way of the control switch	Electronic, by way of the control switch	Electronic, by way of the control switch
Forward / reverse	Electronic switch with interlock to prevent switching while running	Electronic switch with interlock to prevent switching while running	Electronic switch with interlock to prevent switching while running	Electronic switch with interlock to prevent switching while running
Deep discharge protection	Yes	Yes	Yes	Yes

NOTE
The torque selector switch can be used to select three torque settings.

Power tool	Position I	Position II	Position III
SID 14-A	50 Nm (37 lb/ft)	100 Nm (74 lb/ft)	150 Nm (111 lb/ft)
SIW 14-A (⅜" square drive)	65 Nm (48 lb/ft)	115 Nm (85 lb/ft)	160 Nm (118 lb/ft)
SIW 14-A (½" square drive)	80 Nm (59 lb/ft)	120 Nm (89 lb/ft)	185 Nm (136 lb/ft)

Power tool	Position I	Position II	Position III
SID 18-A	60 Nm (44 lb/ft)	110 Nm (81 lb/ft)	165 Nm (122 lb/ft)
SIW 18-A (⅜" square drive)	75 Nm (55 lb/ft)	120 Nm (89 lb/ft)	175 Nm (129 lb/ft)
SIW 18-A (½" square drive)	90 Nm (66 lb/ft)	135 Nm (100 lb/ft)	200 Nm (148 lb/ft)

Battery	B 14/1.6	B 14/3.3	B 18/1.6	B 18/2.6	B 18/3.3
Rated voltage	14.4 V	14.4 V	21.6 V	21.6 V	21.6 V
Battery capacity	1.6 Ah	3.3 Ah	1.6 Ah	2.6 Ah	3.3 Ah
Energy content	23.04 Wh	47.52 Wh	34.56 Wh	56.16 Wh	71.28 Wh
Weight	0.36 kg (0.79 lb)	0.58 kg (1.28 lb)	0.48 kg (1.06 lb)	0.78 kg (1.72 lb)	0.78 kg (1.72 lb)
Temperature monitoring	Yes	Yes	Yes	Yes	Yes
Type of cell	Lithium-ion	Lithium-ion	Lithium-ion	Lithium-ion	Lithium-ion
No. of cells	4	8	6	12	12

5. Safety instructions

NOTE
The safety rules in section 5.1 contain all general safety rules for power tools which, in accordance with the applicable standards, require to be listed in the operating instructions. Accordingly, some of the rules listed may not be relevant to this tool.

5.1 General power tool safety warnings

a) ⚠**WARNING**
Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. **Save all warnings and instructions for future reference.** The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

5.1.1 Work area safety

a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

5.1.2 Electrical safety

a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of

a cord suitable for outdoor use reduces the risk of electric shock.

f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

en

5.1.3 Personal safety

a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.

b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.

f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.

g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

5.1.4 Power tool use and care

a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.

b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.

e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.

f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

5.1.5 Battery tool use and care

a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.

c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.

d) **Under abusive conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.

5.1.6 Service

a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

5.2 Additional safety precautions

5.2.1 Personal safety

a) **Hold power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring.** Fasteners contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

b) **Wear ear protectors.** Exposure to noise can cause hearing loss.

c) **Use auxiliary handle(s), if supplied with the tool.** Loss of control can cause personal injury.

d) **Breathing protection must be worn if the power tool is used without a dust removal system for work that creates dust.**

e) **Improve the blood circulation in your fingers by relaxing your hands and exercising your fingers during breaks between working.**

f) **Avoid touching rotating parts. Switch the power tool on only after bringing it into position at the workpiece.** Touching rotating parts, especially rotating insert tools, may lead to injury.

g) **Activate the safety lock (forward / reverse switch in the middle position) before storing or transporting the power tool.**

h) **Children must be instructed not to play with the power tool.**

i) **The power tool is not intended for use by children, by debilitated persons or those who have received no instruction or training.**

j) **WARNING: Some dust created by grinding, sanding, cutting and drilling contains chemicals known to cause cancer, birth defects, infertility or other reproductive harm; or serious and permanent respiratory or other injury.** Some examples of these chemicals are: lead from lead-based paints, crystalline silica from bricks, concrete and other masonry products and natural stone, arsenic and chromium from chemically-treated lumber. Your risk from these exposures varies, depending on how often you do this type of work. **To reduce exposure to these chemicals, the operator and bystanders should work in a well-ventilated area, work with approved safety equipment, such as respiratory protection appropriate for the type of dust generated, and designed to filter out microscopic particles and direct dust away from the face and body. Avoid prolonged contact with dust. Wear protective clothing and wash exposed areas with soap and water.** Allowing dust to get into your mouth, eyes, or to remain on your skin may promote absorption of harmful chemicals.

5.2.2 Power tool use and care

a) **Secure the workpiece. Use clamps or a vice to secure the workpiece.** The workpiece is thus held more securely than by hand and both hands remain free to operate the power tool.

b) **Check that the insert tools used are compatible with the chuck system and that they are secured in the chuck correctly.**

c) **Ensure fastener and attachment will withstand the level of torque generated by the tool.** Excessive torque may overstress, strip or damage the fastener/attachment and possibly lead to personal injury.

5.2.3 Cordless tool use and care

a) **Ensure the switch is in the off position before inserting the battery pack.** Inserting the battery pack into a lamp that is switched on may dazzle you.

b) **Do not expose batteries to high temperatures or fire.** This presents a risk of explosion.

c) **Do not disassemble, squash or incinerate batteries and do not subject them to temperatures over 80°C.** A risk of fire, explosion or injury through contact with caustic substances may otherwise result.

d) **Avoid ingress of dampness.**Dampness may cause a short circuit resulting in a risk of burning injury or fire.

e) **Do not use batteries other than those approved for use with the applicable power tool or appliance.** Use of other batteries or use of the battery for purposes for which it is not intended presents a risk of fire and explosion.

f) **Observe the special instructions applicable to the transport, storage and use of Li-ion batteries.**

g) **Remove the battery before storing or transporting the power tool.**

h) **Avoid short-circuiting the battery. Check that the terminals on the battery and in the power tool**

are free from foreign objects before inserting the battery in the power tool. Short circuiting the battery terminals presents a risk of fire, explosion and chemical burns.

i) **Do not charge or continue to use damaged batteries (e.g. batteries with cracks, broken parts, bent or pushed-in and/or pulled-out contacts).**

j) If the battery gets too hot to touch, this may indicate that it is faulty. **Place the tool at a location where there is no risk of causing a fire (at least 3 meters away from flammable materials), where it can be kept under observation and allowed to cool. Contact Hilti Service after the battery has been allowed to cool.**

5.2.4 Electrical safety

Before beginning work, check the working area (e.g. using a metal detector) to ensure that no concealed electric cables or gas and water pipes are present. External metal parts of the power tool may become live, for example, when an electric cable is damaged accidentally. This presents a serious risk of electric shock.

5.2.5 Work area

a) **Ensure that the workplace is well lit.**

b) **Ensure that the workplace is well ventilated.** Exposure to dust at a poorly ventilated workplace may result in damage to the health.

5.2.6 Personal protective equipment

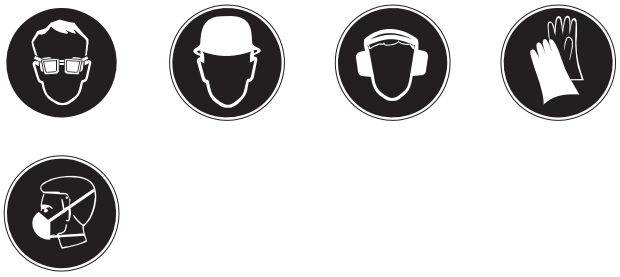

The user and any other persons in the vicinity must wear ANSI Z87.1-approved eye protection, a hard hat, ear protection, protective gloves and breathing protection while the machine is in use.

6. Before use

6.1 Battery use and care

NOTE

Battery performance drops at low temperatures. Use the tool only after fully charging the battery. This ensures that maximum battery capacity is available. Change to a second battery as soon as a drop in performance is noticed. Recharge the battery immediately so that it is ready for reuse.

Store the battery in a cool, dry place. Never store the battery where it is exposed to direct sunlight or sources of heat, e.g. on heaters / radiators or behind a motor vehicle windscreen. Batteries that have reached the end of their life must be disposed of safely and correctly to avoid environmental pollution.

6.2 Charging the battery

DANGER

Only used the specified Hilti battery packs and Hilti battery chargers which are listed under "Accessories".

6.2.1 Charging a new battery for the first time

Charge the battery fully before using it for the first time.

6.2.2 Charging a previously used battery

Ensure that the outer surfaces of the battery are clean and dry before inserting it in the corresponding charger.

Read the operating instructions for the charger for further information about the charging procedure.
Lithium-ion battery packs are ready to use at any time, even when only partially charged. Charging progress is indicated by the LED display (see charger operating instructions).

6.3 Fitting the battery

CAUTION
Before fitting the battery, check that the power tool is switched off and that the safety lock is engaged (forward/reverse switch in the middle position). Use only the Hilti batteries approved for use with this power tool.

CAUTION
Check that the terminals on the battery and in the power tool are free from foreign objects before inserting the battery in the power tool.

1. Push the battery into the power tool from the rear as far as it will go and until it is heard to engage with a double click.
2. **CAUTION If it is not fitted securely, the battery could fall out while you are working with the tool.**
   CAUTION A falling battery may present a risk of injury to yourself or others.
   Before beginning the work, check that the battery is fitted securely to the tool.

6.4 Removing the battery 2

1. Press one or both release buttons.
2. Pull the battery out of the power tool toward the rear.

6.5 Transport and storage of battery packs

Pull the battery pack out of the locked position (working position) and move it into the first latching position (transport position).
If you disconnect a battery pack from the power tool for transport or storage, make sure that the contacts of the battery pack are not short-circuited. Remove loose metal parts such as screws, nails, clamps, loose screw bits, wires or metal swarf from the case, toolbox or transport container, or prevent these parts from coming into contact with the battery packs.
Observe national and international transport regulations when shipping battery packs (transportation by road, rail, sea or air).

7. Operation

7.1 Changing insert tools

CAUTION
Wear protective gloves when changing insert tools as the insert tools get hot during use.

Check that the connection end of the insert tool is clean. Clean the connection end if necessary.

7.1.1 Changing insert tools with the SID 14-A and SID 18-A 3

NOTE
The power tool is equipped with a ¼" hex. socket chuck with locking ring.

7.1.1.1 Fitting the screwdriving bit

1. Set the forward / reverse switch to the middle position or remove the battery from the power tool.
2. Push the bit into the chuck as far as it will go (until it engages).
   NOTE Alternatively, pull the ring on the chuck forward. Hold it securely in this position and then push the bit into the chuck as far as it will go before releasing the ring.

7.1.1.2 Removing the screwdriving bit

1. Set the forward / reverse switch to the middle position or remove the battery from the power tool.
2. Pull the locking ring on the chuck forward and hold it in this position.
3. Pull the screwdriving bit out of the chuck and then release the locking ring.

7.1.2 Changing insert tools with the SIW 14-A and SIW 18-A 4

NOTE

The power tool is equipped with two different chucks: ¹/₂" square drive with ball-notch retention or ³/₈" with locking ring

7.1.2.1 Fitting the socket

1. Set the forward / reverse switch to the middle position or remove the battery from the power tool.
2. Align the hole in the side of the socket with the retention ball on the square drive.
3. Push the socket onto the square drive until it engages.

7.1.2.2 Removing the socket

1. Set the forward / reverse switch to the middle position or remove the battery from the power tool.
2. Through the round hole in the side of the socket, press the retention ball into the square drive.
3. Pull the socket off the square drive.

7.2 Setting forward or reverse rotation 5

NOTE

The forward / reverse switch is used to select the direction of rotation of the drive spindle. An interlock prevents switching while the motor is running. The control switch is locked when the forward / reverse switch is in the middle position. Push the forward / reverse switch to the right (as seen in the working direction) for forward rotation. Push the forward / reverse switch to the left (as seen in the working direction) for reverse rotation.

NOTE

The power tool's working light is no substitute for good general illumination of the working area.

7.3 Torque selector switch 6

The torque selector switch can be used to set the torque to one of three settings (see Technical Data section).
Slide the switch to the desired torque setting.

7.4 Switching on / off

The speed of the power tool can be controlled smoothly (increased from minimum to maximum) by pressing the control switch gradually.

7.5 Driving screws and tightening bolts

7.5.1 Fitting the bit / bit holder

1. Set the forward / reverse switch to the middle position or remove the battery from the power tool.
2. Fit the appropriate insert tool in the chuck.

7.5.2 Screwdriving

WARNING

Ensure fastener and attachment will withstand the level of torque generated by the tool. Excessive torque may overstress, strip or damage the fastener/attachment and possibly lead to personal injury.

1. Set the forward / reverse switch to the desired direction of rotation.
2. Set the torque selector switch to the desired torque.

7.6 Reading the charge status LED display on Li-ion batteries 7

NOTE

The charge status cannot be indicated while the power tool is in operation. Indication is given (LED 1 blinks) only when the battery is fully discharged or when it is too hot (temperature above 80°C).

The Li-ion battery features a charge status LED display. The charge status is indicated by the LEDs on the battery during charging (please refer to the section "Li-ion battery charge status"). When the battery is at rest (not in use), its charge status is indicated by the four LEDs on the battery for a time of three seconds after pressing one of the battery release buttons.

7.7 Belt hook 8

CAUTION

Check that the belt hook is fitted securely before beginning work.

The belt hook allows the power tool to be attached to a belt worn by the operator. The belt hook can also be fitted to the other side of the power tool for use by left-handed persons.

1. Pull the battery out of the tool.
2. Fit the mounting plate into the guides provided.
3. Secure the belt hook with the two screws.

8. Care and maintenance

CAUTION

Before beginning cleaning, remove the battery from the power tool in order to prevent unintentional starting.

8.1 Care of insert tools

Clean off dirt and dust deposits adhering to the insert tools and protect them from corrosion by wiping the insert tools from time to time with an oil-soaked rag.

8.2 Care of the power tool

CAUTION

Keep the power tool, especially its grip surfaces, clean and free from oil and grease. Do not use cleaning agents which contain silicone.

The outer casing of the power tool is made from impact-resistant plastic. Sections of the grip are made from a synthetic rubber material.

Never operate the power tool when the ventilation slots are blocked. Clean the ventilation slots carefully using a dry brush. Do not permit foreign objects to enter the interior of the power tool. Clean the outside of the power tool at regular intervals with a slightly damp cloth. Do not use a spray, steam pressure cleaning equipment or running water for cleaning. This may negatively affect the electrical safety of the power tool.

8.3 Maintenance

WARNING

Repairs to the electrical section of the power tool may be carried out only by trained electrical specialists.

Check all external parts of the power tool for damage at regular intervals and check that all controls operate faultlessly. Do not operate the power tool if parts are damaged or when the controls do not function faultlessly. If necessary, the power tool should be repaired by Hilti Service.

8.4 Care of the Li-ion battery

Avoid entrance of moisture.

Charge the battery fully before using it for the first time.

In order to achieve maximum battery life, stop discharging the battery as soon as a significant drop in performance is noticed.

NOTE

If use of the power tool continues, further battery discharge will be stopped automatically before the battery cells suffer damage.

Charge the battery with the Hilti charger approved for use with Li-ion batteries.

NOTE

- A conditioning charge (as is required with NiCd or NiMH batteries) is not necessary.
- Interruption of the charging procedure has no negative effect on battery life.
- Charging can be started at any time with no negative effect on battery life. There is no memory effect (as with NiCd or NiMH batteries).
- For best results, batteries should be stored fully charged in a cool dry place. Avoid charging the battery in places subject to high ambient temperatures (e.g. at a window) as this has an adverse effect on battery life and increases the rate of self-discharge.
- If the battery no longer reaches full charge, it may have lost capacity due to aging or overstressing. It is possible to continue working with a battery in this condition but it should be replaced in good time.

8.5 Checking the power tool after care and maintenance

After carrying out care and maintenance work on the power tool, check that all protective and safety devices are fitted and that they function faultlessly.

9. Troubleshooting

Fault	Possible cause	Remedy
The power tool doesn't run.	The battery is discharged or fitted incorrectly.	The battery must be heard to engage with a double click or, respectively, needs to be charged.
	Electrical fault.	Remove the battery from the power tool and contact Hilti Service.
The on / off switch can't be pressed, i.e. the switch is locked.	The forward / reverse switch is in the middle position (transport lock engaged).	Push the forward / reverse switch to the left or right.
Running speed suddenly drops considerably.	The battery is discharged.	Change the battery and recharge the discharged battery.
The battery runs down more quickly than usual.	Battery condition is not optimal.	Have battery condition diagnosed by Hilti Service or replace with a new battery.
The battery doesn't engage with an audible click.	The retaining lugs on the battery are dirty.	Clean the retaining lugs and check that the battery engages securely. Contact Hilti Service if the problem persists.
The power tool or the battery become very warm.	Electrical fault.	Switch the power tool off immediately, remove the battery and contact Hilti Service.
	The power tool has been overloaded (application limits exceeded).	Use the right power tool for the job (don't use a low-powered tool for heavy work).

10. Disposal

CAUTION
Improper disposal of the equipment may have serious consequences: The burning of plastic components generates toxic fumes which may present a health hazard. Batteries may explode if damaged or exposed to very high temperatures, causing poisoning, burns, acid burns or environmental pollution. Careless disposal may permit unauthorized and improper use of the equipment. This may result in serious personal injury, injury to third parties and pollution of the environment.

CAUTION
Dispose of defective batteries without delay. Keep them out of reach of children. Do not attempt to open or dismantle batteries and do not dispose of them by incineration.

CAUTION
Dispose of the batteries in accordance with national regulations or return them to Hilti.

Most of the materials from which Hilti power tools or appliances are manufactured can be recycled. The materials must be correctly separated before they can be recycled. In many countries, Hilti has already made arrangements for taking back your old power tools or appliances for recycling. Please ask your Hilti customer service department or Hilti representative for further information.

11. Manufacturer's warranty - tools

Hilti warrants that the tool supplied is free of defects in material and workmanship. This warranty is valid so long as the tool is operated and handled correctly, cleaned and serviced properly and in accordance with the Hilti Operating Instructions, and the technical system is maintained. This means that only original Hilti consumables, components and spare parts may be used in the tool.

This warranty provides the free-of-charge repair or replacement of defective parts only over the entire lifespan of the tool. Parts requiring repair or replacement as a result of normal wear and tear are not covered by this warranty.

Additional claims are excluded, unless stringent national rules prohibit such exclusion. In particular, Hilti is not obligated for direct, indirect, incidental or consequential damages, losses or expenses in connection with, or by reason of, the use of, or inability to use the tool for any purpose. Implied warranties of merchantability or fitness for a particular purpose are specifically excluded.

For repair or replacement, send the tool or related parts immediately upon discovery of the defect to the address of the local Hilti marketing organization provided.

This constitutes Hilti's entire obligation with regard to warranty and supersedes all prior or contemporaneous comments and oral or written agreements concerning warranties.

Hilti Corporation
LI-9494 Schaan
Tel.: +423 / 234 21 11
Fax: +423 / 234 29 65
www.hilti.com

Hilti = registered trademark of Hilti Corp., Schaan
W 3984 0711 00-Pos. 3 1 Printed in China © 2011
Right of technical and programme changes reserved S. E. & O.

2012668 / C

SCM 18-A

Operating instructions	en
Mode d'emploi	fr
Manual de instrucciones	es
Manual de instruções	pt

1

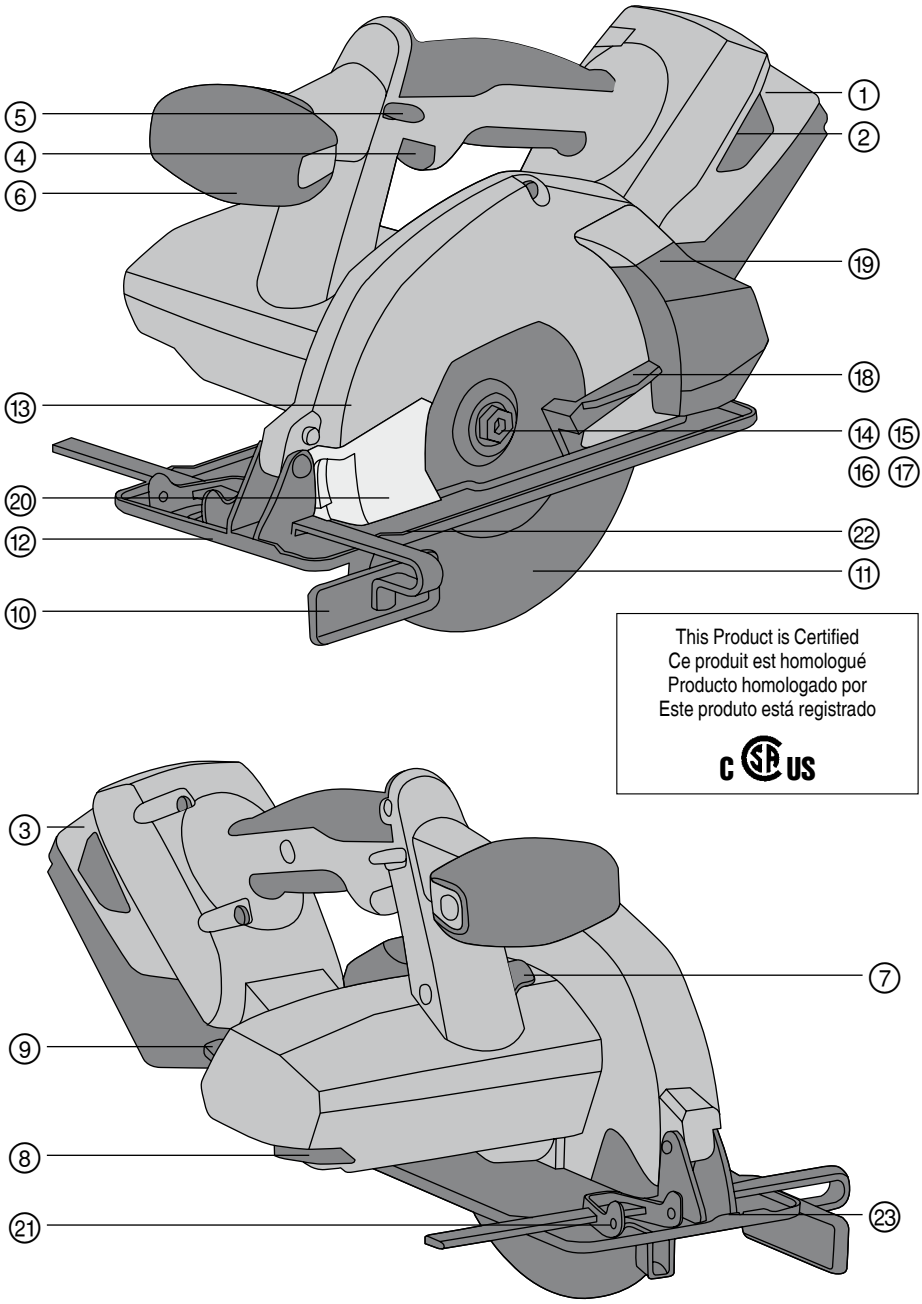
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
This Product is Certified
Ce produit est homologué
Producto homologado por
Este produto está registrado
c SA US

2

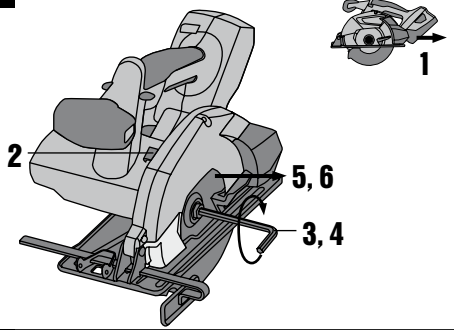

3

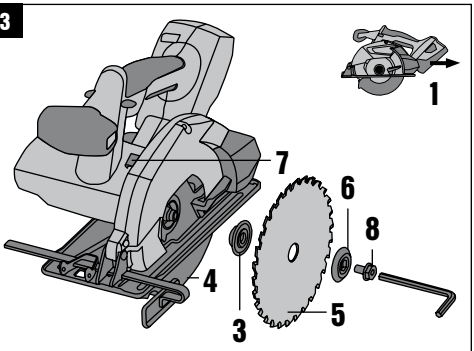

4

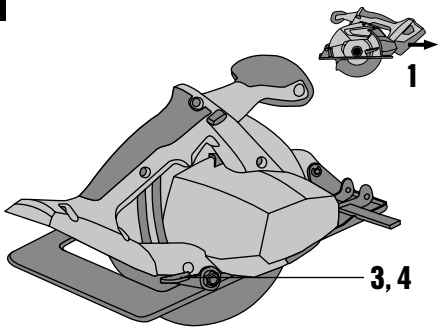

5

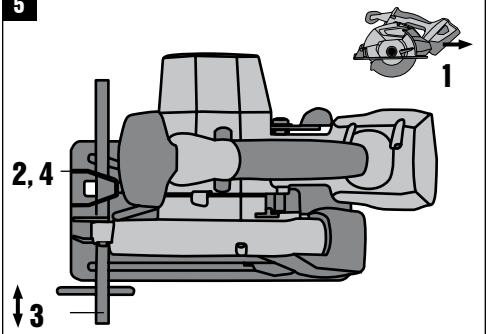

6

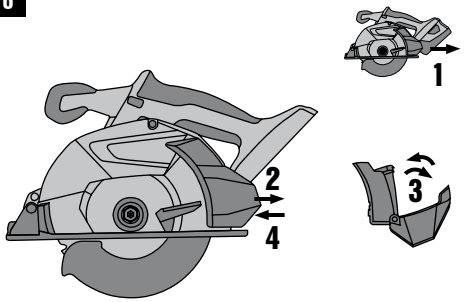

ORIGINAL OPERATING INSTRUCTIONS

SCM 18-A cordless circular saw

en

It is essential that the operating instructions are read before the power tool is operated for the first time.

Always keep these operating instructions together with the power tool.

Ensure that the operating instructions are with the power tool when it is given to other persons.

Contents	Page
1. General information	1
2. Description	3
3. Insert tools, accessories	4
4. Technical data	4
5. Safety instructions	5
6. Before use	10
7. Operation	11
8. Care and maintenance	13
9. Troubleshooting	14
10. Disposal	15
11. Manufacturer's warranty - tools	15

1 These numbers refer to the corresponding illustrations. The illustrations can be found on the fold-out cover pages. Keep these pages open while studying the operating instructions.

In these operating instructions, the designation "the power tool" always refers to the SCM 18-A cordless circular saw.

Operating controls and indicators 1

① Battery
② Release buttons with additional function (charge status display activation)
③ Charge status and fault display (lithium-ion battery)
④ On / off switch
⑤ Switch-on interlock
⑥ Auxiliary grip
⑦ Drive spindle lockbutton
⑧ Hexagon socket wrench
⑨ Clamping lever for cutting depth adjustment
⑩ Parallel guide (rip fence)
⑪ Pivoting guard
⑫ Base plate
⑬ Guard
⑭ Drive spindle
⑮ Mounting flange
⑯ Clamping flange
⑰ Clamping screw
⑱ Pivoting guard operating lever
⑲ Chip collector
⑳ LED / viewing window
㉑ Parallel guide (rip fence) clamp
㉒ Saw blade position indicator
㉓ Cutting line indicator

1. General information

1.1 Safety notices and their meaning

DANGER
Draws attention to imminent danger that will lead to serious bodily injury or fatality.

WARNING
Draws attention to a potentially dangerous situation that could lead to serious personal injury or fatality.

CAUTION
Draws attention to a potentially dangerous situation that could lead to slight personal injury or damage to the equipment or other property.

NOTE
Draws attention to an instruction or other useful information.

1.2 Explanation of the pictograms and other information

Warning signs

General warning

Warning: electricity

Warning: caustic substances

Warning: hot surface

Obligation signs

Wear eye protection

Wear a hard hat

Wear ear protection

Wear protective gloves

Wear breathing protection

Symbols

Read the operating instructions before use

Return waste material for recycling.

V

Volts

Direct current

n_0

Rated speed under no load

/min

Revolutions per minute

RPM

Revolutions per minute

Ø

Diameter

Saw blade

Location of identification data on the power tool

The type designation and serial number can be found on the type identification plate on the machine or tool. Make a note of this data in your operating instructions and always refer to it when making an enquiry to your Hilti representative or service department.

Type:

Generation: 01

Serial no.:

2. Description

2.1 Use of the product as directed

The power tool is a hand-held, cordless circular saw.
The tool is designed for cutting metals or metal-like materials up to a cutting depth of 57 mm.
Working on materials hazardous to the health (e.g. asbestos) is not permissible.
The power tool is designed for professional use and may be operated, serviced and maintained only by trained, authorized personnel. This personnel must be informed of any special hazards that may be encountered. The power tool and its ancillary equipment may present hazards when used incorrectly by untrained personnel or when used not as directed.
The working environment may be as follows: construction site, workshop, renovation, conversion or new construction.
Modification of the power tool or tampering with its parts is not permissible.
The use of saw blades not in compliance with the given specification (e.g. diameter, thickness) or the use of cutting and grinding discs or blades made from high-alloy steel (HSS steel) is not permissible.
Do not use the saw to cut wood or wood-like materials, plastics, gypsum board, gypsum fiberboard and composite materials.
Do not use the battery as a power source for other unspecified appliances.
To avoid the risk of injury, use only genuine Hilti accessories and insert tools.
Observe the information printed in the operating instructions concerning operation, care and maintenance.

2.2 Switch

On / off switch with switch-on interlock

2.3 Grips

Grip and auxiliary grip

2.4 Safety precautions

Blade guard and pivoting guard

2.5 Lubrication

Grease lubrication

2.6 Protection against overload and overheating

The power tool is equipped with an electronic protection system to prevent overloading and overheating. The power tool switches itself off automatically in the event of overloading and overheating. After releasing the on / off switch, the power tool may not restart immediately when the switch is pressed again (while the power tool is cooling down).

2.7 Lithium-ion battery charge status

When a lithium-ion battery is used, the charge status can be indicated by gently pressing one of the battery release buttons (press until resistance is felt - do not release the battery). The display on the rear of the battery provides the following information:

LEDs light constantly	LEDs blink	Charge status C
LED 1,2,3,4	-	$C \geqq 75\ \%$
LED 1,2,3	-	$50\ \% \leqq C < 75\ \%$
LED 1,2	-	$25\ \% \leqq C < 50\ \%$

LEDs light constantly	LEDs blink	Charge status C
LED 1	-	10 % ≦ C < 25 %
-	LED 1	C < 10 %

2.8 Items supplied as standard

1 Power tool
1 Saw blade
1 Hexagon socket wrench
1 Operating instructions
1 Hilti toolbox (optional)
1 Cardboard box (optional)
1 Rip fence / parallel guide (optional)

2.9 Additional items required for operating the tool

B18/2.6 Li-ion or B18/3.3 Li-ion battery and C4/36, C4/36-ACS, C4/36-90 or C4/36-350 charger.

NOTE
Depending on the version, these items may be supplied with the power tool.

3. Insert tools, accessories

Accessories for the SCM 18-A

Designation	Short designation
Charger for Li-ion batteries	C 4/36
Charger for Li-ion batteries	C4/36-ACS
Charger for Li-ion batteries	C 4/36-90
Charger for Li-ion batteries	C 4/36-350
Battery	B 18/2.6 Li-ion
Battery	B 18/3.3 Li-Ion
Rip fence / parallel guide (optional)	

Recommended saw blade

Designation	Short designation
Saw blade	SC-C MU 6 ½ z40 A

4. Technical data

Right of technical changes reserved.

Power tool	SCM 18-A
Rated voltage (DC voltage)	21.6 V
Weight	4.0 kg (8.82 lb)

Power tool	SCM 18-A
Dimensions (L x W x H)	370 mm (14.57") x 206 mm (8.11") x 242 mm (9.53")
Base plate dimensions	248 mm (9.76") x 127 mm (5")
Specified blade diameter	160…165 mm (6.3…6.5")
Saw blade disc thickness	1.2 mm (0.05")
Kerf width	1.6 mm (0.06")
Saw blade arbor size	20 mm (0.79")
Cutting depth	57 mm (2.24")
Speed under no load	3,500/min

Battery	B 18/3.3 Li-ion	B 18/2.6 Li-ion
Rated voltage	21.6 V	21.6 V
Capacity	3.3 Ah	2.6 Ah
Energy capacity	71.28 Wh	56.16 Wh
Weight	0.78 kg (1.72 lb)	0.78 kg (1.72 lb)
Type of cell	Li-Ion	Li-Ion
No. of cells	12	12
Deep discharge protection	Yes	Yes

5. Safety instructions

NOTE
The safety rules in section 5.1 contain all general safety rules for power tools which, in accordance with the applicable standards, must be listed in the operating instructions. Accordingly, some of the rules listed may not be relevant to this tool.

5.1 General power tool safety warnings

a) ⚠ **WARNING**
Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. **Save all warnings and instructions for future reference.** The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

5.1.1 Work area safety

a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

5.1.2 Electrical safety

a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of

a cord suitable for outdoor use reduces the risk of electric shock.

f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

5.1.3 Personal safety

a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.

b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.

f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.

g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

5.1.4 Power tool use and care

a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.

b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.

e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.

f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

5.1.5 Battery tool use and care

a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.

c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.

d) **Under abusive conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.

5.1.6 Service

a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

5.2 Safety instructions for all saws

5.2.1 Cutting procedures

a) ⚠ **DANGER**
Keep hands away from cutting area and the blade. Keep your second hand on auxiliary handle, or motor housing. If both hands are holding the saw, they cannot be cut by the blade.

b) **Do not reach underneath the workpiece.** The guard cannot protect you from the blade below the workpiece.

c) **Adjust the cutting depth to the thickness of the workpiece.** Less than a full tooth of the blade teeth should be visible below the workpiece.

d) **Never hold piece being cut in your hands or across your leg. Secure the workpiece to a stable platform.** It is important to support the work properly to minimize body exposure, blade binding, or loss of control.

e) **Hold power tool by insulated gripping surfaces, when performing an operation where the cutting tool may contact hidden wiring.** Contact with a "live" wire will also make exposed metal parts of the power tool "live" and shock the operator.

f) **When ripping always use a rip fence or straight edge guide.** This improves the accuracy of cut and reduces the chance of blade binding.

g) **Always use blades with correct size and shape (diamond versus round) of arbour holes.** Blades that do not match the mounting hardware of the saw will run eccentrically, causing loss of control.

h) **Never use damaged or incorrect blade washers or bolt.** The blade washers and bolt were specially designed for your saw, for optimum performance and safety of operation.

5.2.2 Further safety instructions for all saws

Causes and Operator Prevention of Kickback:
kickback is a sudden reaction to a pinched, bound or misaligned saw blade, causing an uncontrolled saw to lift up and out of the workpiece toward the operator; when the blade is pinched or bound tightly by the kerf closing down, the blade stalls and the motor reaction drives the unit rapidly back toward the operator; if the blade becomes twisted or misaligned in the cut, the teeth at the back edge of the blade can dig into the top surface of the wood causing the blade to climb out of the kerf and jump back toward the operator.
Kickback is the result of saw misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.

a) **Maintain a firm grip with both hands on the saw and position your arms to resist kickback forces. Position your body to either side of the blade, but not in line with the blade.** Kickback could cause the saw to jump backwards, but kickback forces can be controlled by the operator, if proper precautions are taken.

b) **When blade is binding, or when interrupting a cut for any reason, release the trigger and hold the saw motionless in the material until the blade comes to a complete stop. Never attempt to remove the saw from the work or pull the saw backward while the blade is in motion or kickback may occur.** Investigate and take corrective actions to eliminate the cause of blade binding.

c) **When restarting a saw in the workpiece, centre the saw blade in the kerf and check that saw teeth are not engaged into the material.** If saw blade is binding, it may walk up or kickback from the workpiece as the saw is restarted.

d) **Support large panels to minimise the risk of blade pinching and kickback.** Large panels tend to sag under their own weight. Supports must be placed under the panel on both sides, near the line of cut and near the edge of the panel.

e) **Do not use dull or damaged blades.** Unsharpened or improperly set blades produce narrow kerf causing excessive friction, blade binding and kickback.

f) **Blade depth and bevel adjusting locking levers must be tight and secure before making cut.** If blade adjustment shifts while cutting, it may cause binding and kickback.

g) **Use extra caution when making a "plunge cut" into existing walls or other blind areas.** The protruding blade may cut objects that can cause kickback.

5.2.3 Safety instructions for Circular saw with pendulum guard

a) **Check lower guard for proper closing before each use. Do not operate the saw if lower guard does not move freely and close instantly. Never clamp or tie the lower guard into the open position.** If saw is accidentally dropped, lower guard may be bent. Raise the lower guard with the retracting handle and make sure it moves freely and does not touch the blade or any other part, in all angles and depths of cut.

b) **Check the operation of the lower guard spring. If the guard and the spring are not operating properly, they must be serviced before use.** Lower guard may operate sluggishly due to damaged parts, gummy deposits, or a build-up of debris.

c) **Lower guard should be retracted manually only for special cuts such as "plunge cuts" and "compound cuts." Raise lower guard by retracting handle and as soon as blade enters the material, the lower guard must be released.** For all other sawing, the lower guard should operate automatically.

d) **Always observe that the lower guard is covering the blade before placing saw down on bench or floor.** An unprotected, coasting blade will cause the saw to walk backwards, cutting whatever is in its path. Be aware of the time it takes for the blade to stop after switch is released.

5.3 Additional safety instructions

5.3.1 Personal safety

a) **Wear ear protectors.** Exposure to noise can cause hearing loss.

b) **Always hold the power tool securely with both hands on the grips provided. Keep the grips dry, clean and free from oil and grease.**

c) **Do not operate the power tool without the protective devices that belong to it.**

d) **Operate the power tool only as intended and when it is in faultless condition.**

e) **Improve the blood circulation in your fingers by relaxing your hands and exercising your fingers during breaks between working.**

f) **Switch the power tool on only after bringing it into position at the workpiece.**

g) **Remove the battery before storing or transporting the power tool.**

h) **Always guide the power tool away from your body when working with it.**

i) **Do not work with the power tool overhead.**

j) **Do not attempt to brake the speed of the saw blade by pressing it to the side.**

k) **Do not touch the clamping flange or the clamping screw while the power tool is running.**

l) **Never press the drive spindle lock button while the saw blade is rotating.**

m) **Never direct the power tool toward persons.**

n) **Adjust the pressure applied to the saw blade and the material being cut so that the blade does not stall, possibly causing the power tool to kick back.**

o) Metal cuttings are sharp and present a risk of injury. **Keep your clothing closed so that metal cuttings cannot find their way into your gloves, shoes or other parts of your clothing.**

p) Pay attention to the direction in which the metal chips fly when sawing. **The chips are hot and may cause fires or lead to burning and cutting injuries.**

q) **Children must be instructed not to play with the power tool.**

r) **The power tool is not intended for use by children, by debilitated persons or those who have received no instruction or training.**

s) **WARNING: Some dust created by grinding, sanding, cutting and drilling contains chemicals known to cause cancer, birth defects, infertility or other reproductive harm; or serious and permanent respiratory or other injury.** Some examples of these chemicals are: lead from lead-based paints, crystalline silica from bricks, concrete and other masonry products and natural stone, arsenic and chromium from chemically-treated lumber. Your risk from these exposures varies, depending on how often you do this type of work. **To reduce exposure to these chemicals, the operator and bystanders should work in a well-ventilated area, work with approved safety equipment, such as respiratory protection appropriate for the type of dust generated, and designed to filter out microscopic particles and direct dust away from the face and body. Avoid prolonged contact with dust. Wear protective clothing and wash exposed areas with soap and water.** Allowing dust to get into your mouth, eyes, or to remain on your skin may promote absorption of harmful chemicals.

5.3.2 Power tool use and care

a) **Secure the workpiece. Use clamps or a vice to secure the workpiece.** The workpiece is thus held more securely than by hand and both hands remain free to operate the power tool.
b) **Check that the insert tools used are compatible with the chuck system and that they are secured in the chuck correctly.**
c) **Take care to ensure that metal cuttings do not find their way into the tool or battery.**
d) **Empty the chip collector and clean the power tool before putting it away in the toolbox or other container for storage or transport.** Metal chips may otherwise fall out of the collector and find their way into the power tool, battery or charger, presenting a risk of damage or malfunction.

5.3.3 Electrical safety

Before beginning work, check the working area (e.g. using a metal detector) to ensure that no concealed electric cables or gas and water pipes are present. External metal parts of the power tool may become live, for example, when an electric cable is damaged accidentally. This presents a serious risk of electric shock.

5.3.4 Battery use and care

a) **Observe the special instructions applicable to the transport, storage and use of Li-ion batteries.**
b) **Do not expose batteries to high temperatures or fire.** This presents a risk of explosion.
c) **Do not disassemble, squash or incinerate batteries and do not subject them to temperatures over 80°C (176°F).** A risk of fire, explosion or injury through contact with caustic substances may otherwise result.
d) **Do not use batteries other than those approved for use with the applicable power tool or appliance.** Use of other batteries or use of the battery for purposes for which it is not intended presents a risk of fire and explosion.
e) **Do not charge or continue to use damaged batteries (e.g. batteries with cracks, broken parts, bent or pushed-in and/or pulled-out contacts).**
f) If the battery gets too hot to touch, this may indicate that it is faulty. **Place the tool at a location where there is no risk of causing a fire (at least 3 meters away from flammable materials), where it can be kept under observation and allowed to cool. Contact Hilti Service after the battery has been allowed to cool.**

5.3.5 Work area

a) **Ensure that the workplace is well lit.**
b) **Ensure that the workplace is well ventilated.** Exposure to dust at a poorly ventilated workplace may result in damage to the health.

5.3.6 Personal protective equipment

The user and any other persons in the vicinity must wear ANSI Z87.1-approved eye protection, a hard hat, ear protection, protective gloves and breathing protection while the machine is in use.

5.3.7 Safety precautions

Do not switch the power tool on if the saw blade, the blade guard or the pivoting guard are not fitted correctly.

6. Before use

en

6.1 Battery use and care

NOTE

Battery performance drops at low temperatures. Never use the battery until the cells become fully discharged. Change to the second battery as soon as a drop in performance is noticed. Recharge the battery immediately so that it is ready for reuse.

Store the battery in a cool, dry place. Never store the battery where it is exposed to direct sunlight or sources of heat, e.g. on heaters / radiators or behind a motor vehicle windscreen. Batteries that have reached the end of their life must be disposed of safely and correctly to avoid environmental pollution.
Insert the battery in the corresponding charger.

6.2 Charging the battery

DANGER

Only used the specified Hilti battery packs and Hilti battery chargers which are listed under "Accessories".

DANGER

Ensure that the outer surfaces of the battery are clean and dry before inserting it in the corresponding charger. Read the operating instructions for the charger for further information about the charging procedure.

6.2.1 Charging a new battery for the first time

Charge the battery fully before using it for the first time.

6.2.2 Charging a previously used battery

Ensure that the outer surfaces of the battery are clean and dry before inserting it in the corresponding charger.

Read the operating instructions for the charger for further information about the charging procedure.
Lithium-ion battery packs are ready to use at any time, even when only partially charged. Charging progress is indicated by the LED display (see charger operating instructions).

6.3 Fitting the battery

CAUTION

Before fitting the battery, check that the power tool is switched off and the switch-on interlock is activated (not pressed). Use only the Hilti batteries approved for use with this power tool.

CAUTION

Check that the terminals on the battery and in the power tool are free from foreign objects before inserting the battery in the power tool.

1. Push the battery into the power tool from the rear as far as it will go and until it is heard to engage with a double click.
2. **CAUTION A falling battery may present a risk of injury to yourself or others.**
   Check that the battery is seated securely in the power tool.

6.4 Removing the battery from the power tool

1. Press both battery release buttons.
2. Pull the battery out of the power tool toward the rear.

6.5 Transport and storage of batteries

CAUTION

Empty the chip collector and clean the power tool before putting it away in the toolbox or other container for storage or transport. Metal chips may otherwise fall out of the collector and find their way into the power tool, battery or charger, presenting a risk of damage or malfunction.

Pull the battery out of the locked position (working position) and move it into the first click-stop position (transport position).

If you disconnect a battery from the power tool for transport or storage, make sure that the battery contacts are not short-circuited. Remove loose metal items such as screws, nails, clamps, loose screwdriving bits, wires or metal cuttings and chips from the toolbox or transport container, or prevent these items from coming into contact with the battery.
Observe national and international transport regulations when shipping batteries (transportation by road, rail, sea or air).

7. Operation

NOTE
If the blade has jammed, the tool will not restart by itself after pressure on it has been released. The switch-on interlock and the on/off button must be pressed again to restart.

NOTE
The chip collector must always be fitted when the tool is in use.

CAUTION
Wear protective gloves. The cutting edges of the saw blade and cut edges of the workpiece are sharp. These sharp edges present a risk of injury.

CAUTION
Wear protective glasses and a dust mask. The sawing operation swirls up dust and chips into the air. The dust and chips may be harmful to the eyes and respiratory system.

CAUTION
Wear ear protectors. The power tool and the sawing operation generate noise. Exposure to noise can cause loss of hearing.

CAUTION
Secure the workpiece. Use clamps or a vice to secure the workpiece. This will help to prevent vibration.

CAUTION
Do not saw off very narrow strips. Narrow strips may be caught by the blade and pulled in, causing jamming, or may be thrown out, presenting a risk of injury.

CAUTION
When sawing, take care to ensure that there are no flammable materials in the vicinity and that no hot metal cuttings fall onto highly flammable materials.

CAUTION
Do not use coolants or lubricants when sawing.

7.1 Changing the saw blade

CAUTION
Wear protective gloves when changing insert tools. The tool, the clamping flange and the clamping screw get hot.

CAUTION
Check that the blade to be fitted complies with the technical requirements and that it is well sharpened. A sharp saw blade is an essential requirement for a perfect cut.

7.1.1 Removing the saw blade 2

1. Pull the battery out of the power tool.
2. Press the drive spindle lockbutton and hold it in this position.
3. Turn the saw blade clamping screw with the hex. socket wrench until the locking pin engages fully.
4. Release the clamping screw by turning the wrench further clockwise.
5. Remove the clamping screw from the outer clamping flange.
6. Open the pivoting guard by swinging it to the side and then remove the saw blade.

7.1.2 Fitting the saw blade 3

1. Pull the battery out of the power tool.
2. Clean the mounting flange and the clamping flange.
3. Fit the mounting flange.
4. Open the pivoting guard.
5. **CAUTION Only use blades which are suitable for this saw. Observe the direction-of-rotation arrow on the saw blade.**
   Fit the new saw blade.
6. Fit the outer clamping flange.
7. Press the drive spindle lockbutton.
8. Fasten the clamping flange with the clamping screw by turning it anti-clockwise.
9. Before using the power tool, check that the saw blade is securely attached.

7.2 Adjusting the cutting depth 4

The cutting depth can be infinitely adjusted between 0 and 57 mm.

1. Pull the battery out of the power tool.
2. Place the power tool on a supporting surface.
3. Release the cutting depth adjustment clamping lever.
4. Lift the power tool in a scissor movement and set the desired cutting depth by closing the clamping lever.

7.3 Sawing along a line

The position of the saw blade is indicated by the mark on the base plate. This allows accurate cuts to be made. The edge of the line indicator corresponds to the inside of the saw blade. The viewing window provides a better view of the cutting line and thus helps ensure a more accurate cut.

1. Secure the workpiece to prevent movement.
2. Position the workpiece so that the saw blade is free to rotate beneath it.
3. Check to ensure that the on / off switch on the power tool is in the “off” position.
4. Fit the battery into the power tool.
5. Position the forward section of the saw’s base plate on the workpiece but do not bring the blade into contact with the workpiece.
6. If the switch-on interlock has been pressed, switch the power tool on by pressing the on/off button.
7. Guide the saw along the cutting line on the workpiece at a suitable speed.

7.4 Sawing using the rip fence (accessory)

Use of the single arm rip fence allows precise cuts to be made along the edge of the workpiece, or strips of even width to be cut.
The rip fence can be fitted on either side of the base plate.

7.5 Fitting / adjusting the parallel guide (rip fence) 5

1. Remove the battery from the power tool.
2. Press the clamp together.
3. Push the parallel guide (rip fence) into the base plate as far as you wish.
4. Release the clamp when the parallel guide is in the desired position.

7.6 Emptying the chip collector 6

CAUTION
Wear protective gloves when emptying the chip collector. The metal chips are sharp-edged and may be hot.

CAUTION
Empty the chip collector and clean the power tool before putting it away in the toolbox or other container for storage or transport. Metal chips may otherwise fall out of the collector and find their way into the power tool, battery or charger, presenting a risk of damage or malfunction.

When the power tool is in use you can check with the aid of the viewing window whether the collector is full.

1. Remove the battery from the tool.
2. Pull the chip collector away from the tool to the rear.
3. Swing the two halves of the chip collector apart and empty out its contents.
4. Push the chip collector onto the guard until in engages in position.

7.7 Procedure if the chip / dust channel is blocked

1. Remove the battery from the tool.
2. Remove the chip collector.
3. Clean the chip / dust channel.

4. Check that moving parts on the power tool are working properly and not jamming. Check also whether parts are broken or damaged in such a way that may cause the power tool to malfunction.

8. Care and maintenance

CAUTION
Before beginning cleaning, remove the battery from the power tool in order to prevent unintentional starting.

8.1 Care of insert tools

Clean off dirt and dust deposits adhering to the insert tools and protect them from corrosion by wiping the insert tools from time to time with an oil-soaked rag.

8.2 Care of the power tool

CAUTION
Keep the power tool, especially its grip surfaces, clean and free from oil and grease. Do not use cleaning agents which contain silicone.

The outer casing of the power tool is made from impact-resistant plastic. Sections of the grip are made from a synthetic rubber material.
Never operate the power tool when the ventilation slots are blocked. Clean the ventilation slots carefully using a dry brush. Do not permit foreign objects to enter the interior of the power tool. Clean the outside of the power tool at regular intervals with a slightly damp cloth. Do not use a spray, steam pressure cleaning equipment or running water for cleaning. This may negatively affect the electrical safety of the power tool.

8.3 Care of the Li-ion battery

Avoid entrance of moisture.
Charge the battery fully before using it for the first time.
In order to achieve maximum battery life, stop discharging the battery as soon as a significant drop in performance is noticed.
NOTE
If use of the power tool continues, further battery discharge will be stopped automatically before the battery cells suffer damage.
Charge the battery with the Hilti charger approved for use with Li-ion batteries.
NOTE
- A conditioning charge (as is required with NiCd or NiMH batteries) is not necessary.
- Interruption of the charging procedure has no negative effect on battery life.
- Charging can be started at any time with no negative effect on battery life. There is no memory effect (as with NiCd or NiMH batteries).
- For best results, batteries should be stored fully charged in a cool dry place. Avoid charging the battery in places subject to high ambient temperatures (e.g. at a window) as this has an adverse effect on battery life and increases the rate of self-discharge.
- If the battery no longer reaches full charge, it may have lost capacity due to aging or overstressing. It is possible to continue working with a battery in this condition but it should be replaced in good time.

8.4 Maintenance

WARNING
Repairs to the electrical section of the power tool may be carried out only by trained electrical specialists.

Check all external parts of the power tool for damage at regular intervals and check that all controls operate faultlessly. Do not operate the power tool if parts are damaged or when the controls do not function faultlessly. Have the power tool repaired by Hilti Service.

8.5 Checking the power tool after care and maintenance

After carrying out care and maintenance work on the power tool, check that all protective and safety devices are fitted and that they function faultlessly.

9. Troubleshooting

Fault	Possible cause	Remedy
The power tool does not run.	The battery is discharged or fitted incorrectly.	The battery must be heard to engage with a double click or, respectively, needs to be charged.
	Electrical fault.	Remove the battery from the power tool and contact Hilti Service.
	The battery is discharged/hot.	Deep discharge prevention / the electronics switch off. Insert the battery in the charger or allow it to cool down.
The on / off button can not be pressed, i.e. the button is locked.	Not a fault (safety function).	Press the switch-on interlock.
Running speed suddenly drops considerably.	The saw blade jams.	Keep the saw blade running straight.
Chips are not transported into the chip collector and thus fall onto the base plate.	The chip collector is full or the chip deflector is blocked.	Empty the chip collector and/or clean the chip ejector channel.
The saw blade stalls.	Saw advance pressure is too high.	Reduce advance pressure and restart the saw.
The power tool doesn't work and all 4 LEDs blink.	The power tool has been overloaded.	Release the control switch and press it again.
	The overheating prevention cut-out has been activated.	Allow the power tool to cool down. Clean the ventilation slots.
The power tool doesn't run and 1 LED blinks.	The battery is discharged.	Change the battery and recharge the discharged battery.
	The battery is too hot or too cold.	Bring the battery to the recommended working temperature.
The battery runs down more quickly than usual.	Battery condition is not optimal.	Have battery condition diagnosed by Hilti Service or replace with a new battery.
The battery does not engage with an audible double click.	The retaining lugs on the battery are dirty.	Clean the retaining lugs and check that the battery engages securely. Contact Hilti Service if the problem persists.
The power tool or the battery becomes very warm.	Electrical fault.	Switch the power tool off immediately, remove the battery and contact Hilti Service.
	The power tool has been overloaded (application limits exceeded).	Use the right power tool for the job (don't use a low-powered tool for heavy work).

10. Disposal

CAUTION
Improper disposal of the equipment may have serious consequences: the burning of plastic components generates toxic fumes which may present a health hazard. Batteries may explode if damaged or exposed to very high temperatures, causing poisoning, burns, acid burns or environmental pollution. Careless disposal may permit unauthorized and improper use of the equipment. This may result in serious personal injury, injury to third parties and pollution of the environment.

CAUTION
Dispose of defective batteries without delay. Keep them out of reach of children. Do not attempt to open or dismantle batteries and do not dispose of them by incineration.

CAUTION
Dispose of the batteries in accordance with national regulations or return them to Hilti.

Most of the materials from which Hilti power tools or appliances are manufactured can be recycled. The materials must be correctly separated before they can be recycled. In many countries, Hilti has already made arrangements for taking back your old power tools or appliances for recycling. Please ask your Hilti customer service department or Hilti representative for further information.

11. Manufacturer's warranty - tools

Hilti warrants that the tool supplied is free of defects in material and workmanship. This warranty is valid so long as the tool is operated and handled correctly, cleaned and serviced properly and in accordance with the Hilti Operating Instructions, and the technical system is maintained. This means that only original Hilti consumables, components and spare parts may be used in the tool.

This warranty provides the free-of-charge repair or replacement of defective parts only over the entire lifespan of the tool. Parts requiring repair or replacement as a result of normal wear and tear are not covered by this warranty.

Additional claims are excluded, unless stringent national rules prohibit such exclusion. In particular, Hilti is not obligated for direct, indirect, incidental or consequential damages, losses or expenses in connection with, or by reason of, the use of, or inability to use the tool for any purpose. Implied warranties of merchantability or fitness for a particular purpose are specifically excluded.

For repair or replacement, send the tool or related parts immediately upon discovery of the defect to the address of the local Hilti marketing organization provided.

This constitutes Hilti's entire obligation with regard to warranty and supersedes all prior or contemporaneous comments and oral or written agreements concerning warranties.

Hilti Corporation
LI-9494 Schaan
Tel.: +423 / 234 21 11
Fax: +423 / 234 29 65
www.hilti.com

Hilti = registered trademark of Hilti Corp., Schaan
W 4082 | 0312 | 00-Pos. 3 | 1
Printed in China © 2012
Right of technical and programme changes reserved S. E. & O.

2019523 / A4